


4.0L Gasoline Engine , CEUC,CEUD,CTGE

From June 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

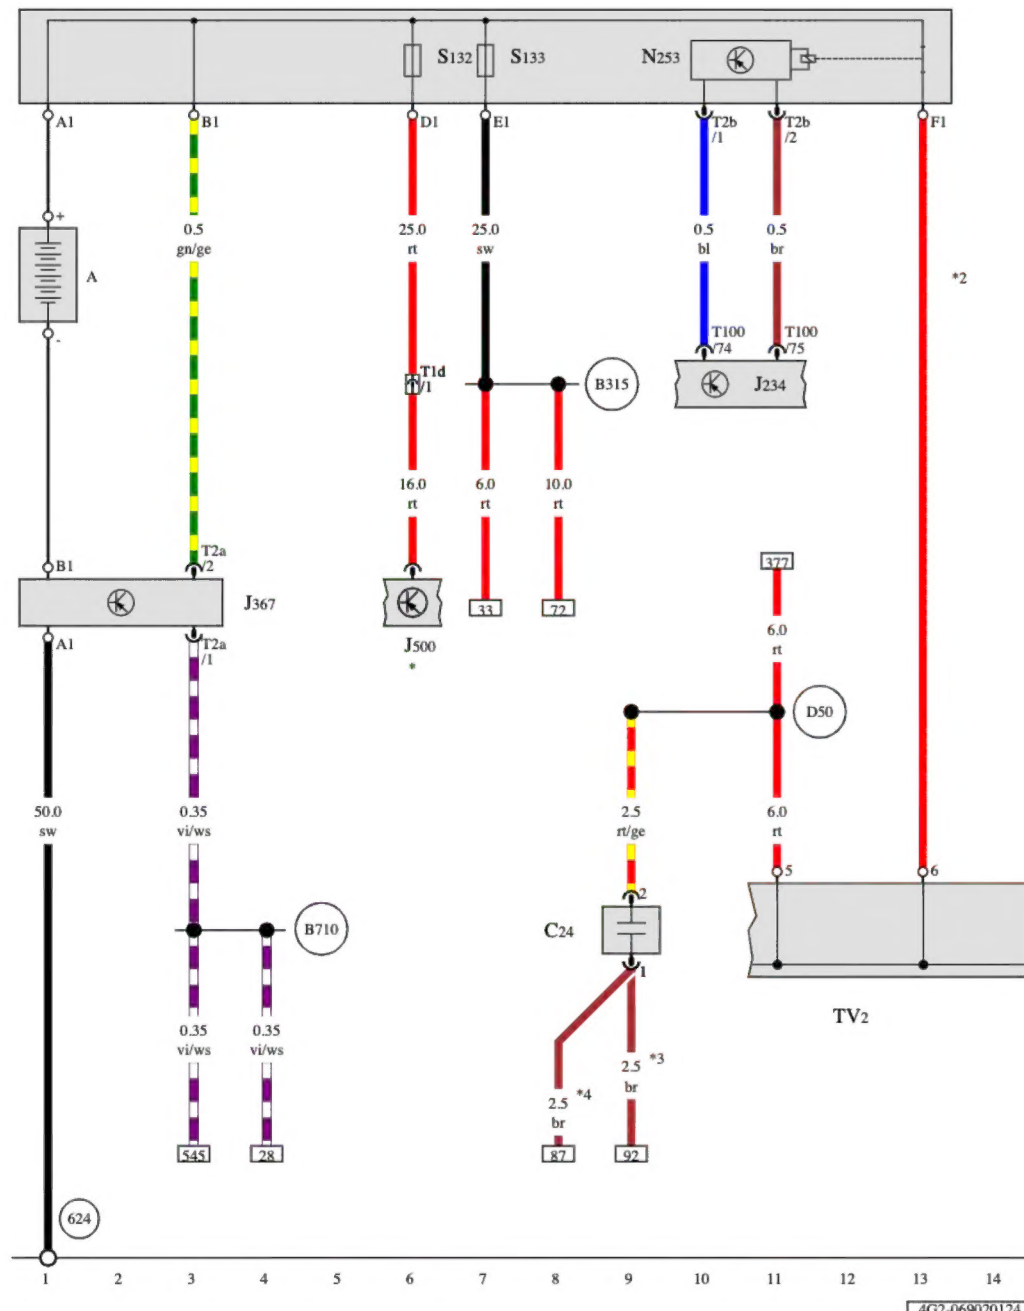

Battery, Suppressor, Battery Monitoring Control Module, Battery Interrupt Igniter, Terminal 30 Wire Junction


- A Battery
- C24 Suppressor
- J234 Airbag Control Module
- J367 Battery Monitoring Control Module
- J500 Power Steering Control Module
- N253 Battery Interrupt Igniter, Near the Battery
- S132 Safety Fuse 2
- S133 Safety Fuse 3
- T1d 1-Pin Connector, On the Left Front of the Vehicle Floor, Black
- T2a 2-Pin Connector
- T2b 2-Pin Connector, Yellow
- TV2 Terminal 30 Wire Junction
- T100 100-Pin Connector
- 624 Ground Connection near Starter Battery
- B315 Positive Connection 1 (30a) (in Main Wiring Harness)
- B710 LIN Bus Connection 5 (in Main Wiring Harness)
- D50 Positive Connection (30) (in Engine/Motor Compartment Wiring Harness)
- * Refer to Applicable Wiring Diagram
- *2 Flat Conductor
- *3 From June 2014
- *4 Through May 2014

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Starter, Generator, Terminal 30 Wire Junction

- B Starter
- C Generator
- C1 Voltage Regulator
- S42 Radiator Fan Fuse
- S104 Radiator Fan Second Speed Fuse
- TV2 Terminal 30 Wire Junction
- T5 5-Pin Connector, In the Center Plenum Chamber, Black
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
- U6 Battery Jump Start Terminal
- 13 Ground Connection in Engine/Motor Compartment, Right
- 685 Ground Connection 1 on Right Front Longitudinal Member

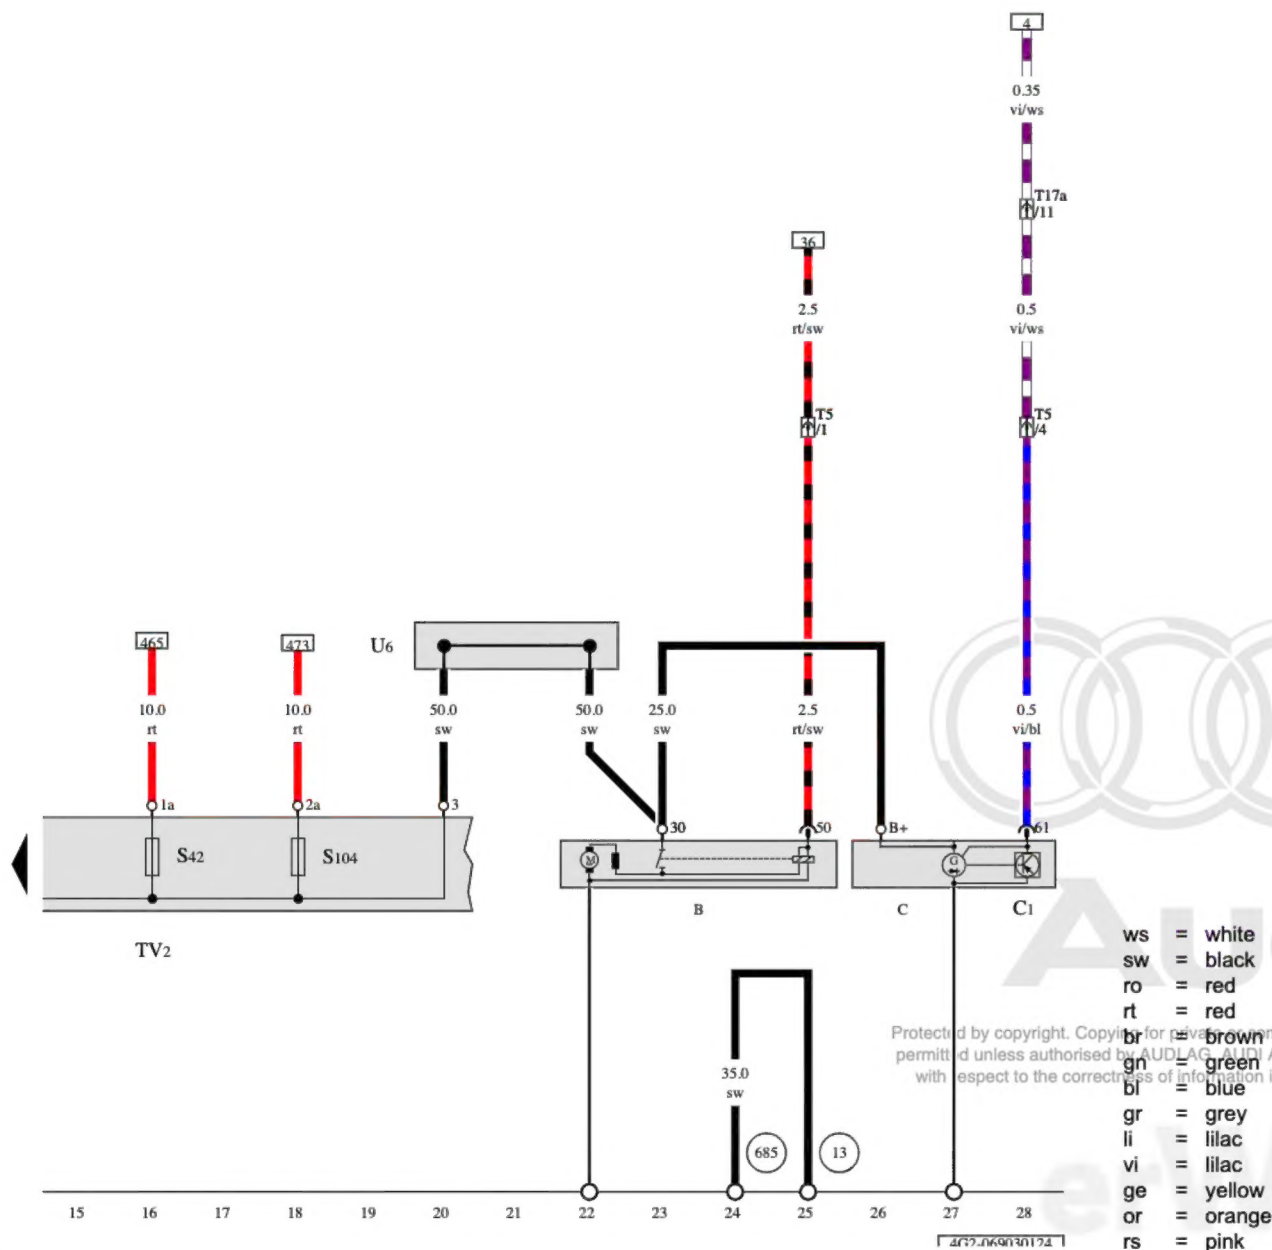

Protected by copyright. Copying for private use, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



D210 Connection 50 (in Engine/Motor Compartment Wiring Harness)


- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Through May 2014
- *3 For RHD Vehicles
- *4 From June 2014

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Fuse Panel A

- J217 Transmission Control Module
- SA Fuse Panel A
- ST1 Fuse Panel 1
- SA1 Fuse 1 (On Fuse Panel A)
- SA2 Fuse 2 (On Fuse Panel A)
- SA3 Fuse 3 (On Fuse Panel A)
- SA4 Fuse 4 (On Fuse Panel A)
- SA5 Fuse 5 (On Fuse Panel A)
- SA6 Fuse 6 (On Fuse Panel A)
- SA7 Fuse 7 (On Fuse Panel A)
- SB15 Fuse 15 (On Fuse Panel B)
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
- D51 Positive Connection 1 (15) (in Engine/Motor Compartment Wiring Harness)
- D182 Connection 3 (87A) (in Engine/Motor Compartment Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Refer to Applicable Wiring Diagram for Automatic Transmission
- *3 Diameter Depends on Equipment

Protected by copyright. Copying for private or commercial purposes or part of in which is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

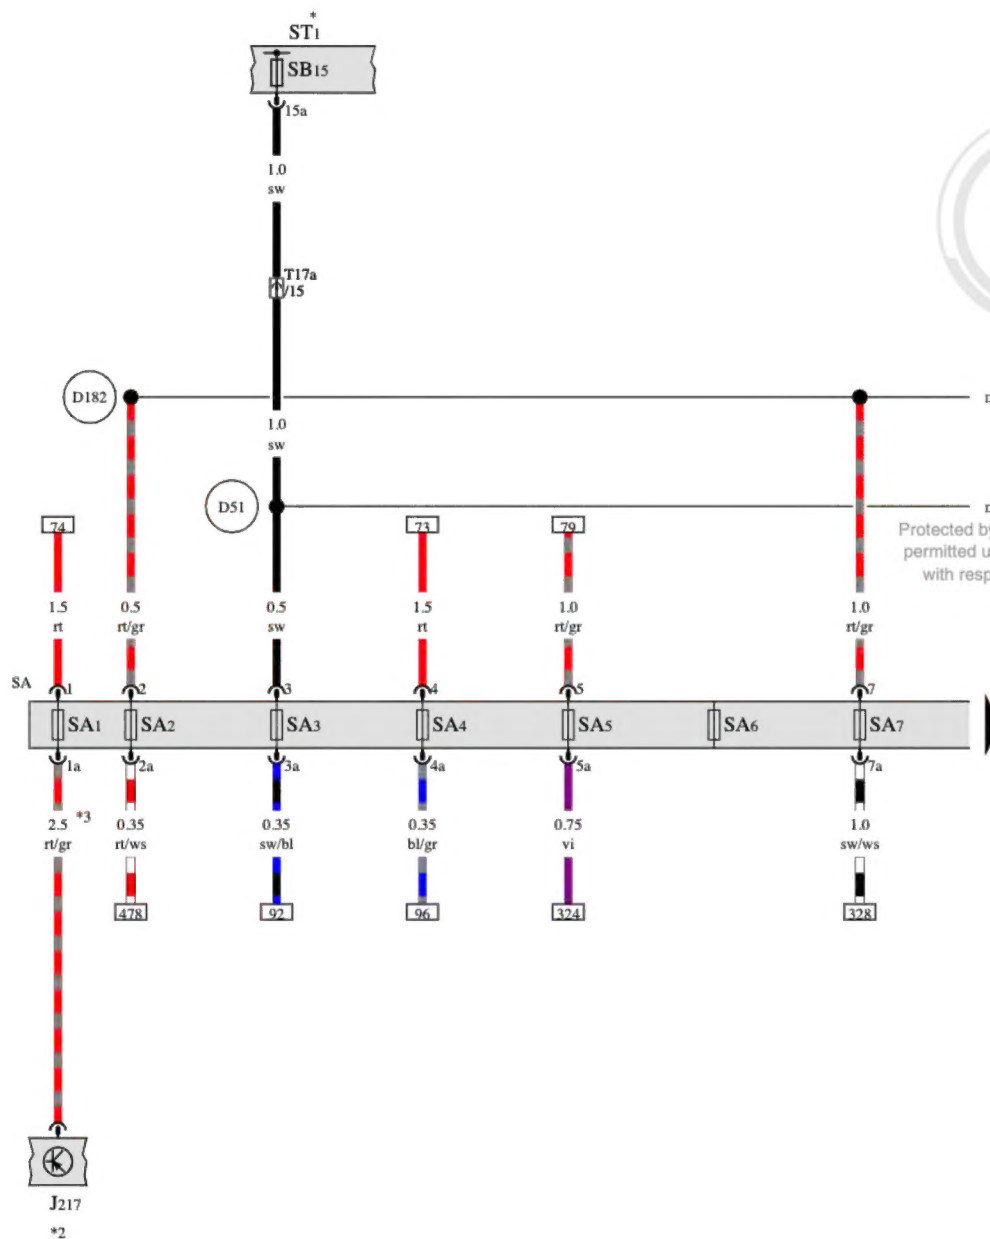


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

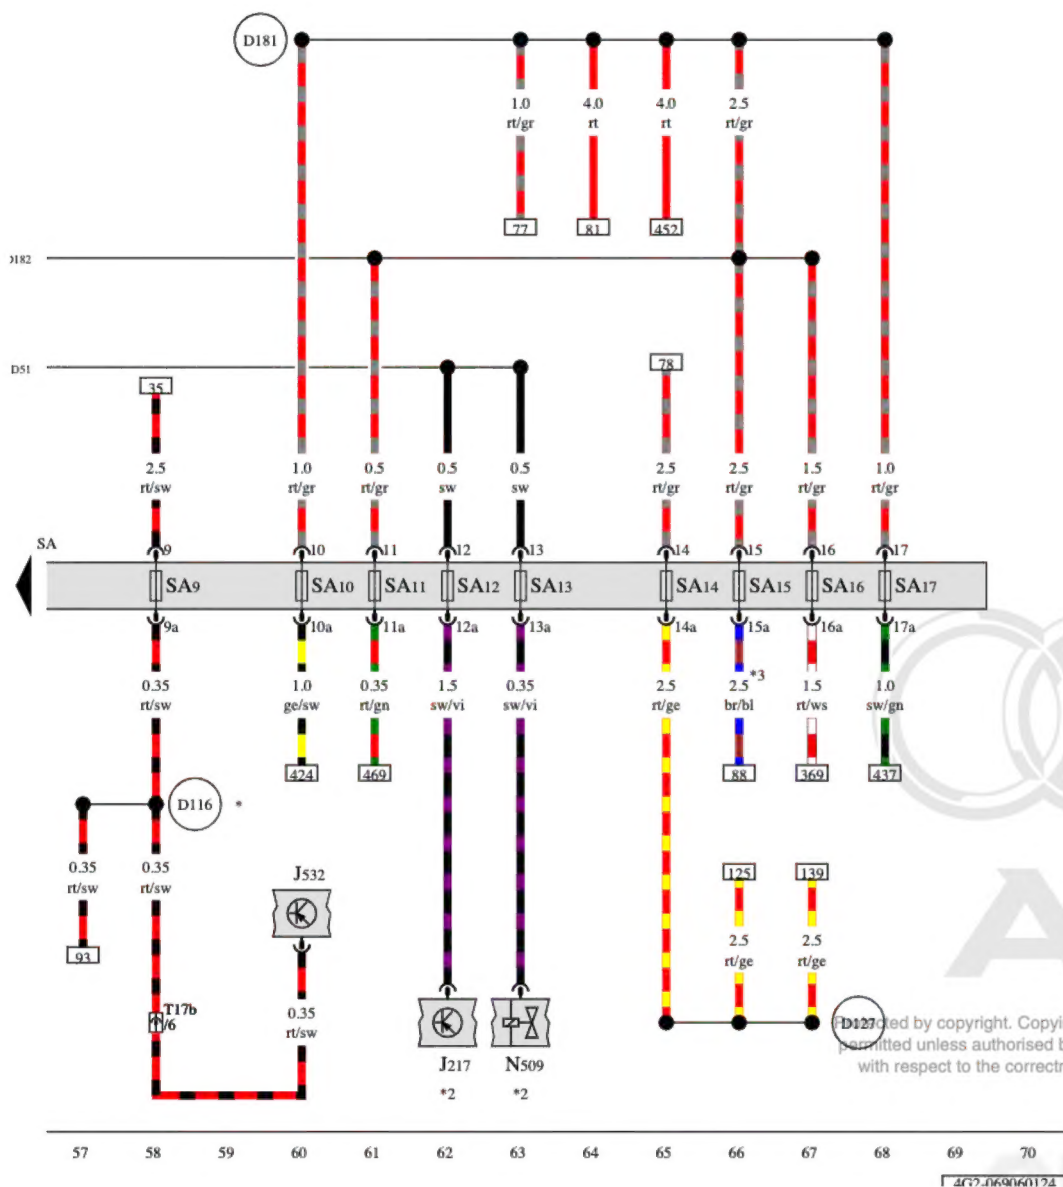

Fuse Panel A

- J217 Transmission Control Module
- J532 Voltage Stabilizer
- N509 Transmission Fluid Cooling Valve
- SA Fuse Panel A
- SA9 Fuse 9 (On Fuse Panel A)
- SA10 Fuse 10 (On Fuse Panel A)
- SA11 Fuse 11 (On Fuse Panel A)
- SA12 Fuse 12 (On Fuse Panel A)
- SA13 Fuse 13 (On Fuse Panel A)
- SA14 Fuse 14 (On Fuse Panel A)
- SA15 Fuse 15 (On Fuse Panel A)
- SA16 Fuse 16 (On Fuse Panel A)
- SA17 Fuse 17 (On Fuse Panel A)
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, Red
- D51 Positive Connection 1 (15) (in Engine/Motor Compartment Wiring Harness)
- D116 Connection 14 (in Engine/Motor Compartment Wiring Harness)
- D127 Connection 25 (in Engine/Motor Compartment Wiring Harness)
- D181 Connection 2 (87A) (in Engine/Motor Compartment Wiring Harness)
- D182 Connection 3 (87A) (in Engine/Motor Compartment Wiring Harness)
- * For Vehicles with Start/Stop System
- *2 Refer to Applicable Wiring Diagram for Automatic Transmission
- *3 Running Change

Copyrighted by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

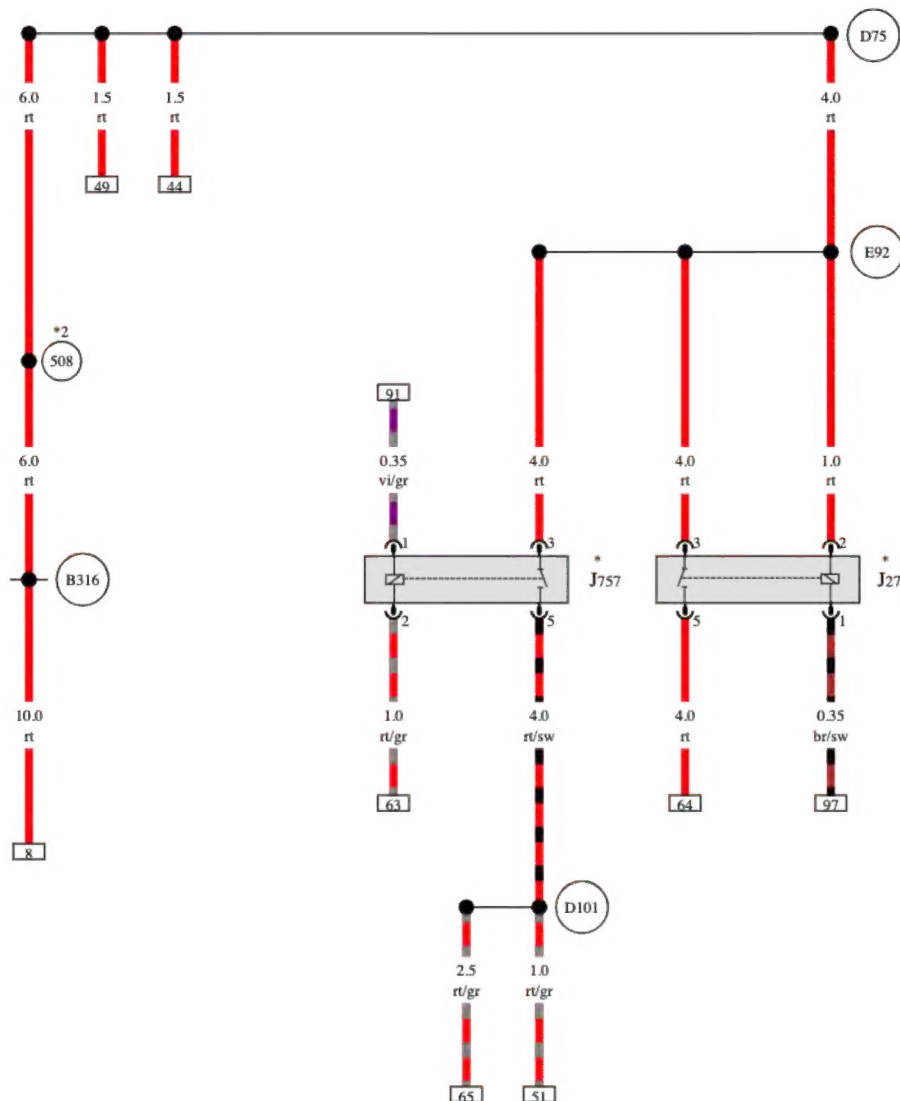

Motronic Engine Control Module Power Supply Relay, Engine Component Power Supply Relay

J271 Motronic Engine Control Module Power Supply Relay
J757 Engine Component Power Supply Relay

508 Terminal 30 Threaded Connection (On E-Box)

B316 Positive Connection 2 (30a) (in Main Wiring Harness)

D75 Positive Connection 2 (30) (in Engine/Motor Compartment Wiring Harness)

D101 Connection 1 (in Engine/Motor Compartment Wiring Harness)

E92 Positive Connection 3 (30) (in Engine/Motor Compartment Wiring Harness)

* Relay and Fuse Panel in the Plenum Chamber E-Box
*2 Threaded Connection in the Plenum Chamber E-Box

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Engine/Motor Control Module

J217 Transmission Control Module
J623 Engine/Motor Control Module
T91 91-Pin Connector, Black

85 Ground Connection 1 (in Engine/Motor Compartment Wiring Harness)


131 Ground Connection 2 (in Engine/Motor Compartment Wiring Harness)


363 Ground Connection 8 (in Engine/Motor Compartment Wiring Harness)

645 Ground Connection 1 on Bulkhead

D103 Connection 3 (in Engine/Motor Compartment Wiring Harness)

* Refer to Applicable Wiring Diagram for Automatic Transmission
*2 From June 2014
*3 Running Change
*4 Through May 2014

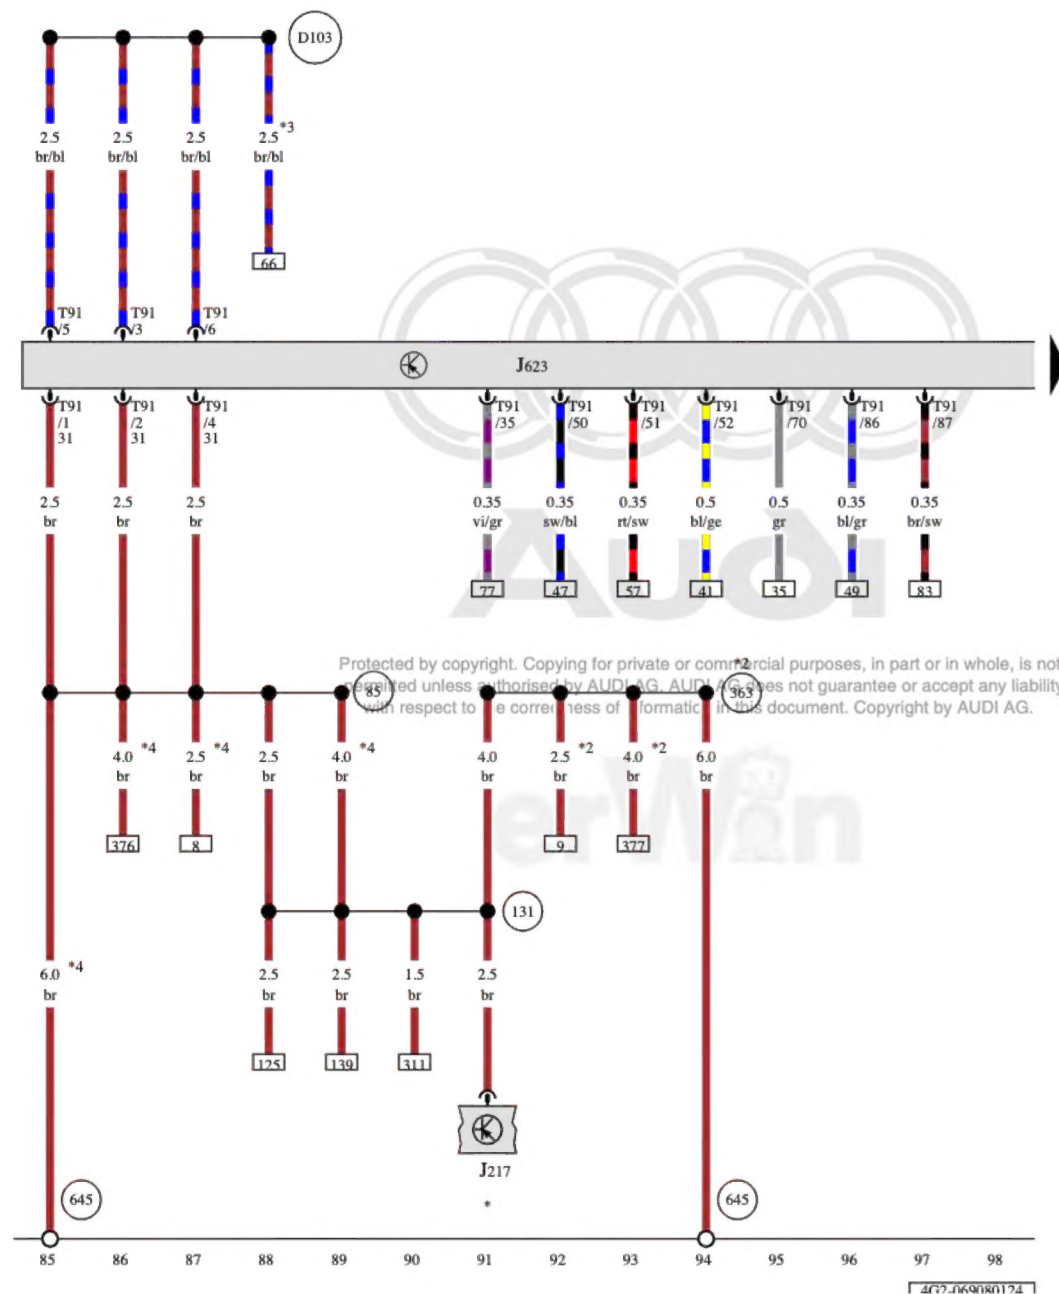

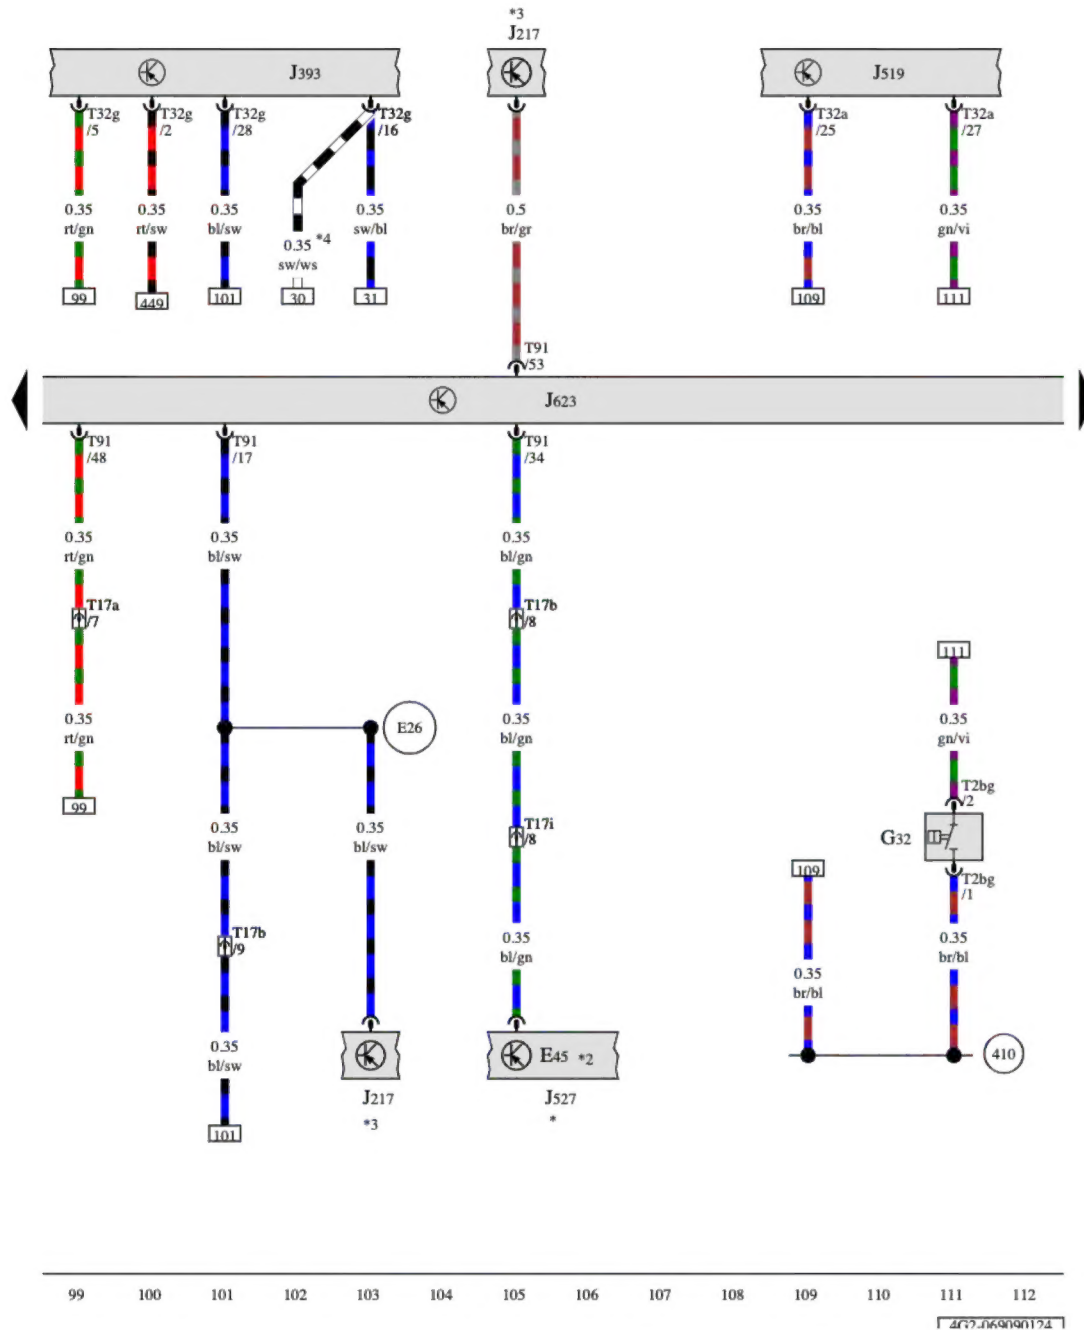

Engine Coolant Level Sensor, Vehicle Electrical System Control Module, Engine/Motor Control Module

- E45 Cruise Control Switch
- G32 Engine Coolant Level Sensor
- J217 Transmission Control Module
- J393 Comfort System Central Control Module
- J519 Vehicle Electrical System Control Module
- J527 Steering Column Electronics Control Module
- J623 Engine/Motor Control Module
- T2bg 2-Pin Connector
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, Red
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station, Black
- T32a 32-Pin Connector
- T32g 32-Pin Connector
- T91 91-Pin Connector, Black

410 Sensor Ground Connection 1 (in Main Wiring Harness)

E26 Selector Lever P/N Position Connection (in Motronic Multiform Fuel Injection Wiring Harness)

- * Refer to Applicable Wiring Diagram for Multifunction Steering Wheel
- *2 For Vehicles with Cruise Control System
- *3 Refer to Applicable Wiring Diagram for Automatic Transmission
- *4 For RHD Vehicles


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Engine/Motor Control Module, Ignition Coil 1 with Power Output Stage, Spark Plug Connectors, Spark Plugs

- J623 Engine/Motor Control Module
- N70 Ignition Coil 1 with Power Output Stage
- N127 Ignition Coil 2 with Power Output Stage
- N291 Ignition Coil 3 with Power Output Stage
- N292 Ignition Coil 4 with Power Output Stage
- P Spark Plug Connectors
- Q Spark Plugs
- T4a 4-Pin Connector, Black
- T4b 4-Pin Connector, Black
- T4c 4-Pin Connector, Black
- T4d 4-Pin Connector, Black
- T105 105-Pin Connector, Black

- 132 Ground Connection 3 (in Engine/Motor Compartment Wiring Harness)
- 317 Ground Connection 7 (in Engine/Motor Compartment Wiring Harness)
- 600 Ground Connection on Cylinder Head, Right
- D102 Connection 2 (in Engine/Motor Compartment Wiring Harness)

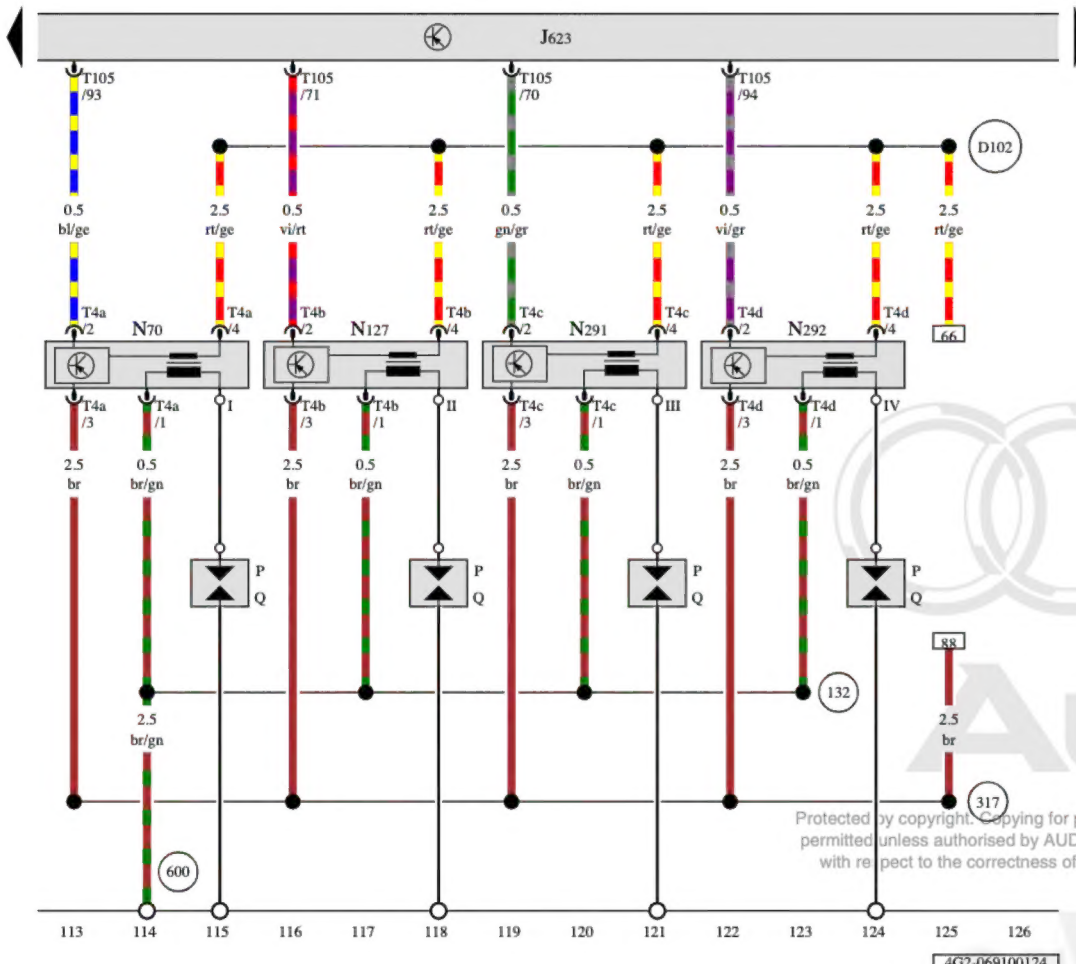


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Engine/Motor Control Module, Ignition Coil 5 with Power Output Stage, Spark Plug Connectors, Spark Plugs

- J623 Engine/Motor Control Module
- N323 Ignition Coil 5 with Power Output Stage
- N324 Ignition Coil 6 with Power Output Stage
- N325 Ignition Coil 7 with Power Output Stage
- N326 Ignition Coil 8 with Power Output Stage
- P Spark Plug Connectors
- Q Spark Plugs
- T4e 4-Pin Connector, Black
- T4f 4-Pin Connector, Black
- T4g 4-Pin Connector, Black
- T4h 4-Pin Connector, Black
- T105 105-Pin Connector, Black

- 201 Ground Connection 5 (in Engine/Motor Compartment Wiring Harness)
- 209 Ground Connection 6 (in Engine/Motor Compartment Wiring Harness)
- 601 Ground Connection on Cylinder Head, Left
- D104 Positive Connection 2 (30a) (in Engine/Motor Compartment Wiring Harness)

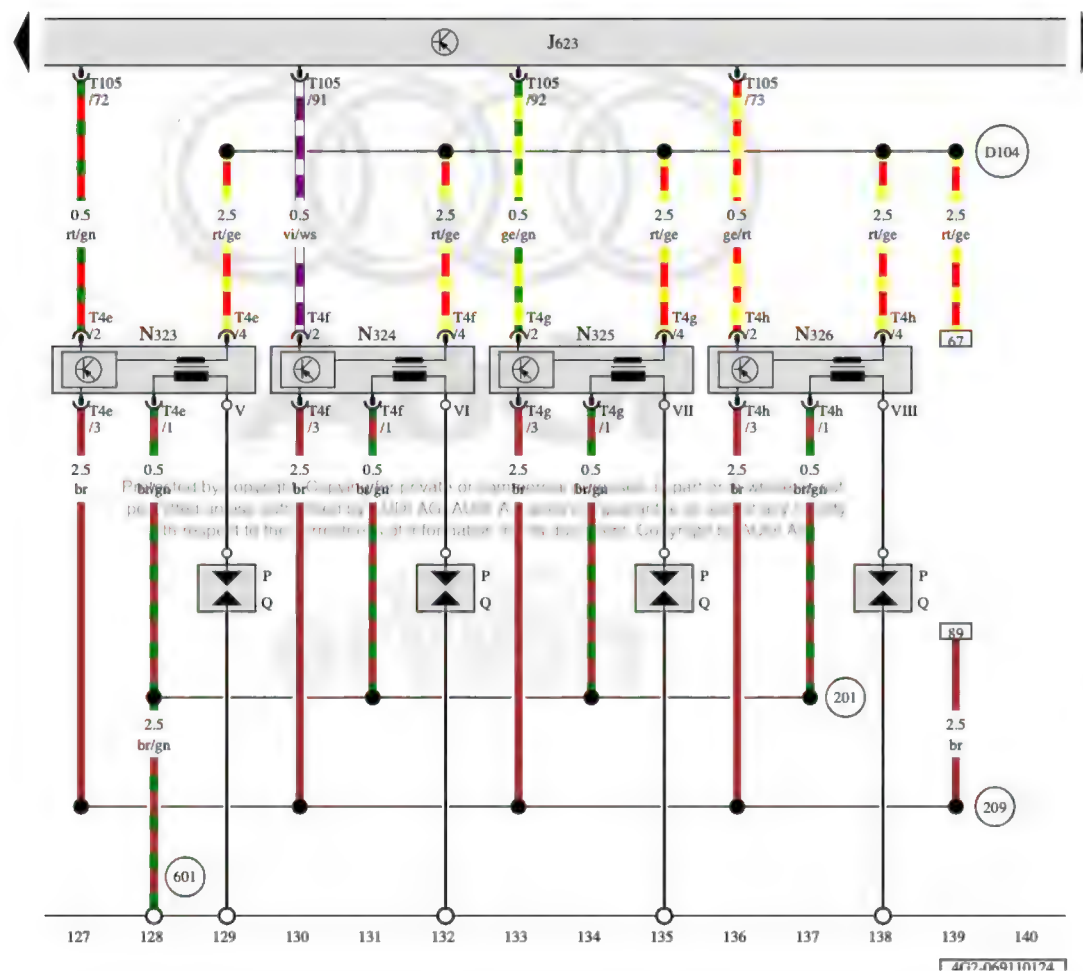


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Engine/Motor Control Module, Cylinder 1 Fuel Injector, Cylinder 2 Fuel Injector, Cylinder 6 Fuel Injector, Cylinder 8 Fuel Injector

- J623 Engine/Motor Control Module
- N30 Cylinder 1 Fuel Injector
- N31 Cylinder 2 Fuel Injector
- N84 Cylinder 6 Fuel Injector
- N86 Cylinder 8 Fuel Injector
- T2eh 2-Pin Connector
- T2ei 2-Pin Connector
- T2en 2-Pin Connector
- T2ny 2-Pin Connector
- T105 105-Pin Connector, Black

D108 Connection 6 (in Engine/Motor Compartment Wiring Harness)

D109 Connection 7 (in Engine/Motor Compartment Wiring Harness)

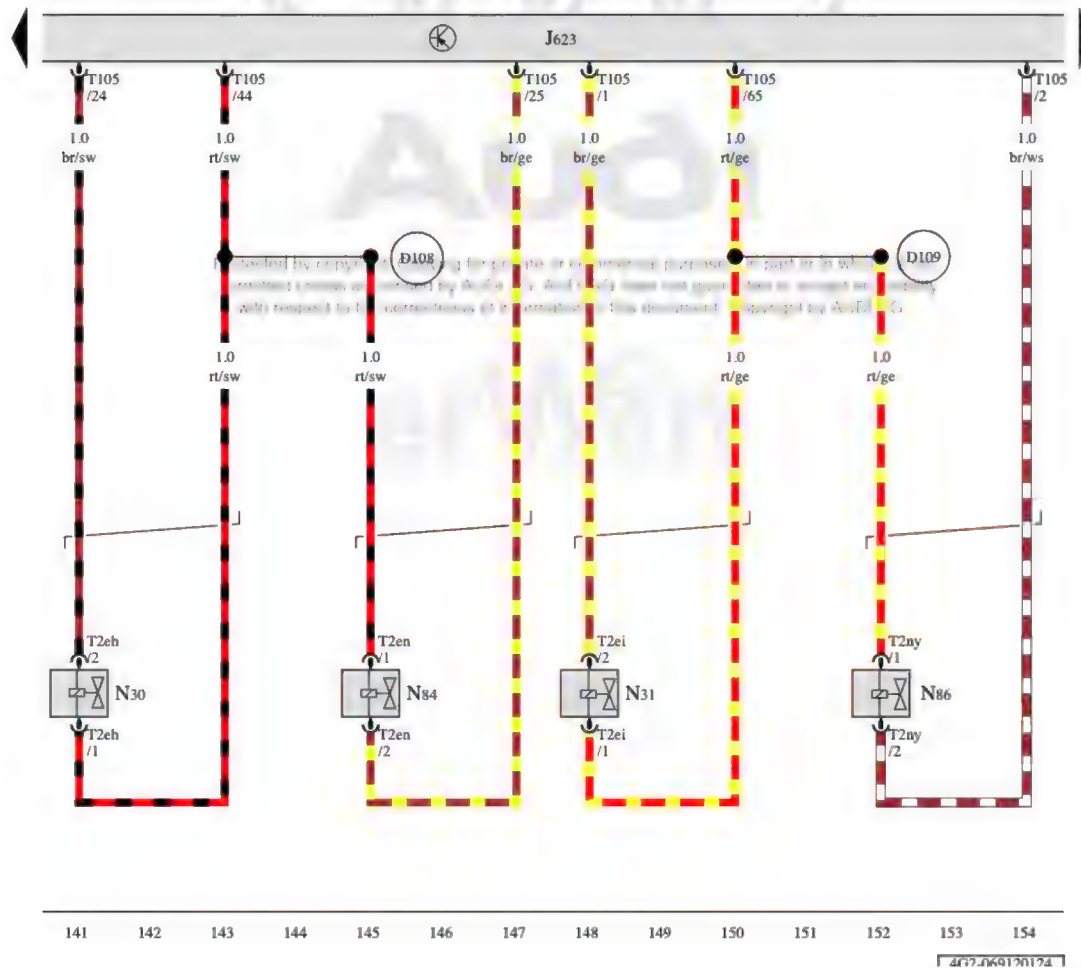


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Engine/Motor Control Module, Cylinder 3 Fuel Injector, Cylinder 4 Fuel Injector, Cylinder 5 Fuel Injector, Cylinder 7 Fuel Injector

- J623 Engine/Motor Control Module
- N32 Cylinder 3 Fuel Injector
- N33 Cylinder 4 Fuel Injector
- N83 Cylinder 5 Fuel Injector
- N85 Cylinder 7 Fuel Injector
- T2ek 2-Pin Connector
- T2el 2-Pin Connector
- T2em 2-Pin Connector
- T2nx 2-Pin Connector
- T105 105-Pin Connector, Black


D106 Connection 4 (in Engine/Motor Compartment Wiring Harness)

D107 Connection 5 (in Engine/Motor Compartment Wiring Harness)

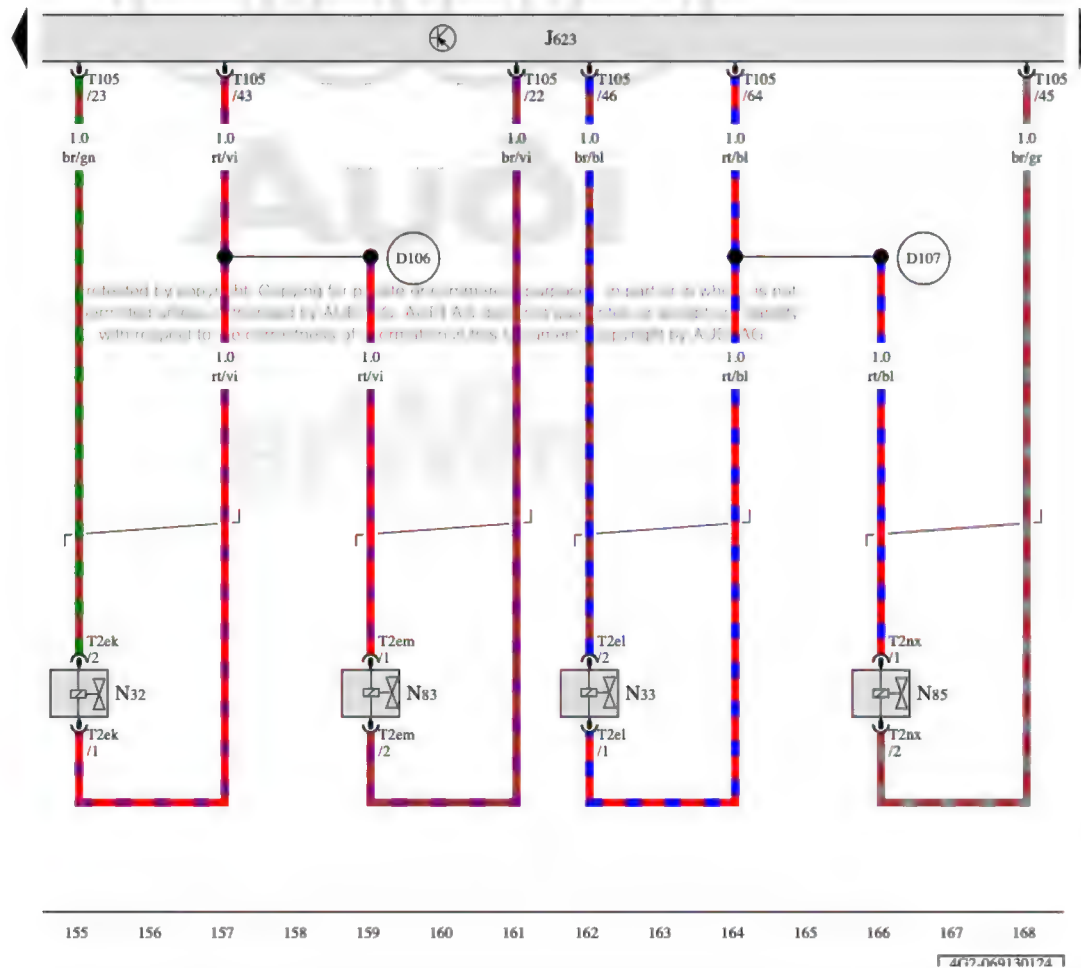

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Accelerator Pedal Position Sensor, Throttle Valve Control Module, Engine/Motor Control Module

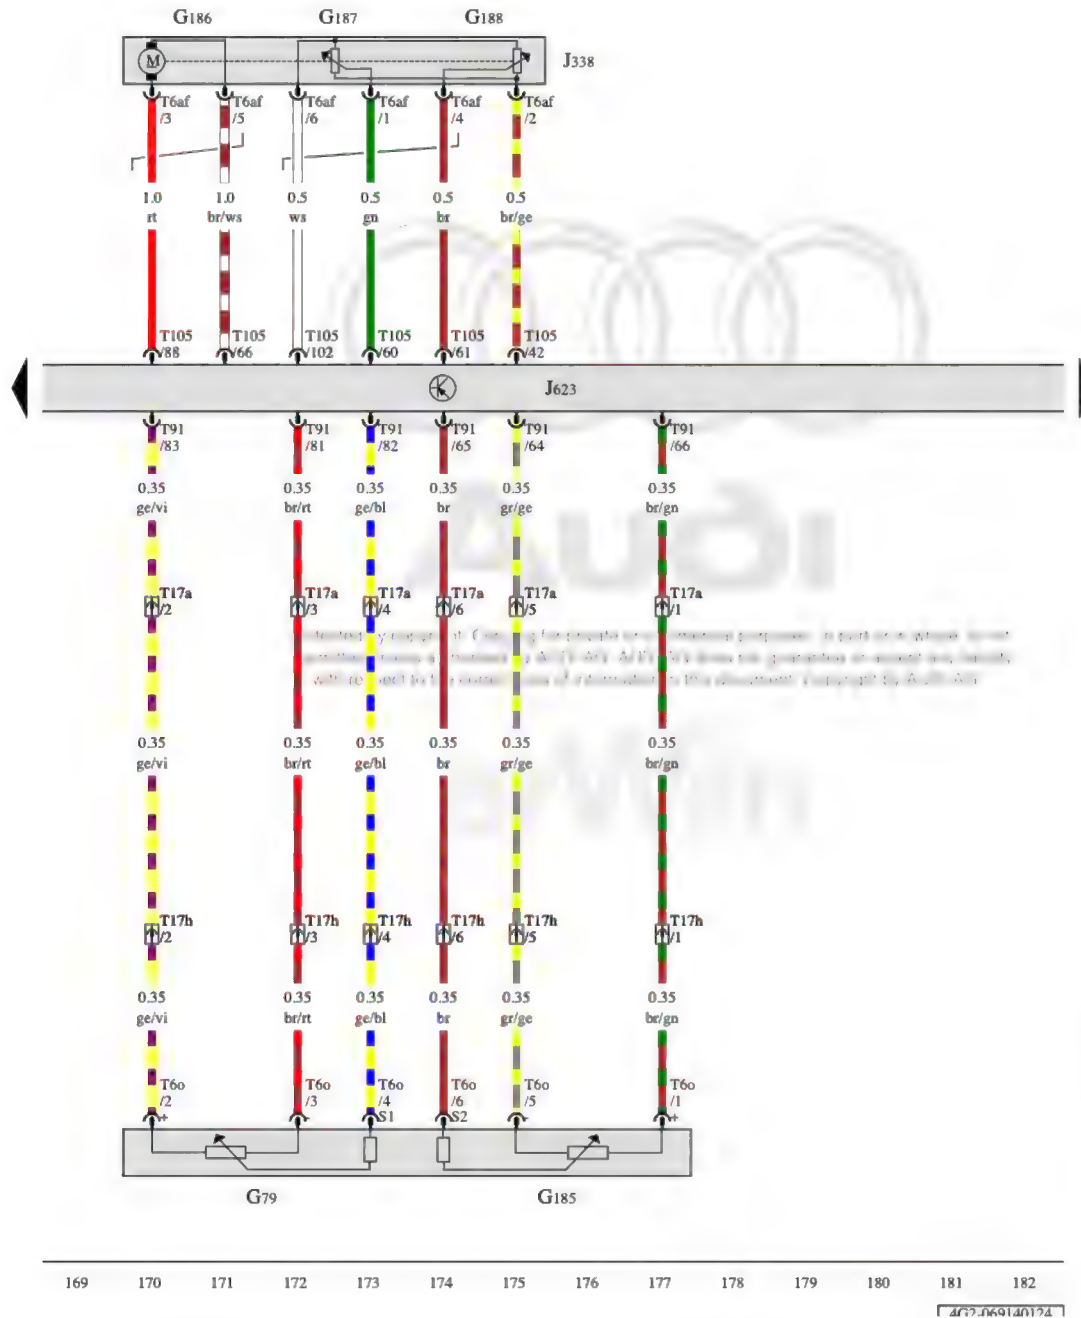

- G79 Accelerator Pedal Position Sensor
- G185 Accelerator Pedal Position Sensor 2
- G186 EPC Throttle Drive
- G187 EPC Throttle Drive Angle Sensor 1
- G188 EPC Throttle Drive Angle Sensor 2
- J338 Throttle Valve Control Module
- J623 Engine/Motor Control Module
- T6af 6-Pin Connector, Black
- T6o 6-Pin Connector, Black
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station, Red
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black

Knock Sensor 1, Knock Sensor 2, Knock Sensor 3, Knock Sensor 4, Engine/Motor Control Module

- G61 Knock Sensor 1
- G66 Knock Sensor 2
- G198 Knock Sensor 3
- G199 Knock Sensor 4
- J623 Engine/Motor Control Module
- T2mz 2-Pin Connector
- T2na 2-Pin Connector
- T2nz 2-Pin Connector
- T3by 3-Pin Connector, Black
- T105 105-Pin Connector, Black

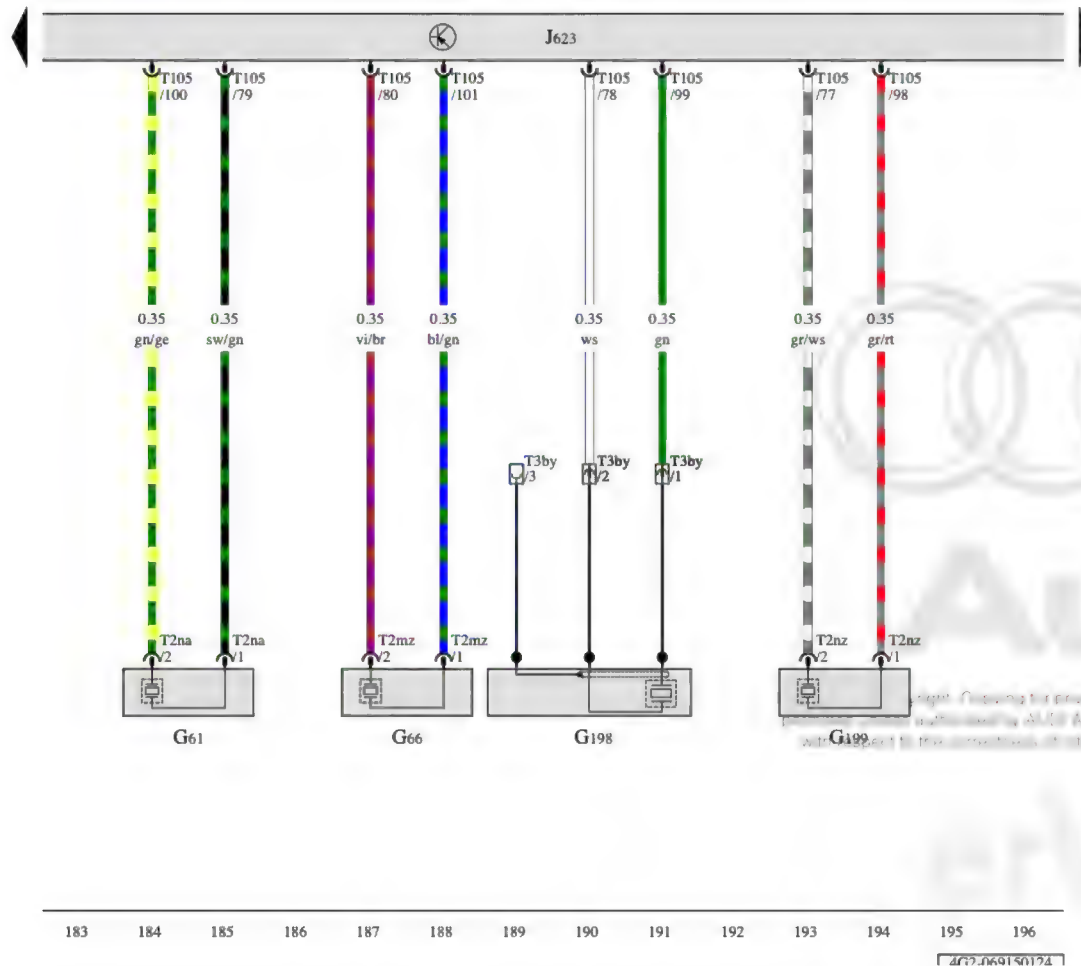


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Camshaft Position Sensor, Camshaft Position Sensor 2,
Camshaft Position Sensor 3, Camshaft Position Sensor 4,
Engine/Motor Control Module

- G40 Camshaft Position Sensor
- G163 Camshaft Position Sensor 2
- G300 Camshaft Position Sensor 3
- G301 Camshaft Position Sensor 4
- J623 Engine/Motor Control Module
- T3aa 3-Pin Connector
- T3d 3-Pin Connector
- T3e 3-Pin Connector
- T3z 3-Pin Connector
- T105 105-Pin Connector, Black

220 Sensor Ground Connection (in Engine Wiring Harness)

D190 Connection 3 (5V) (in Engine Pre-Wiring Harness)

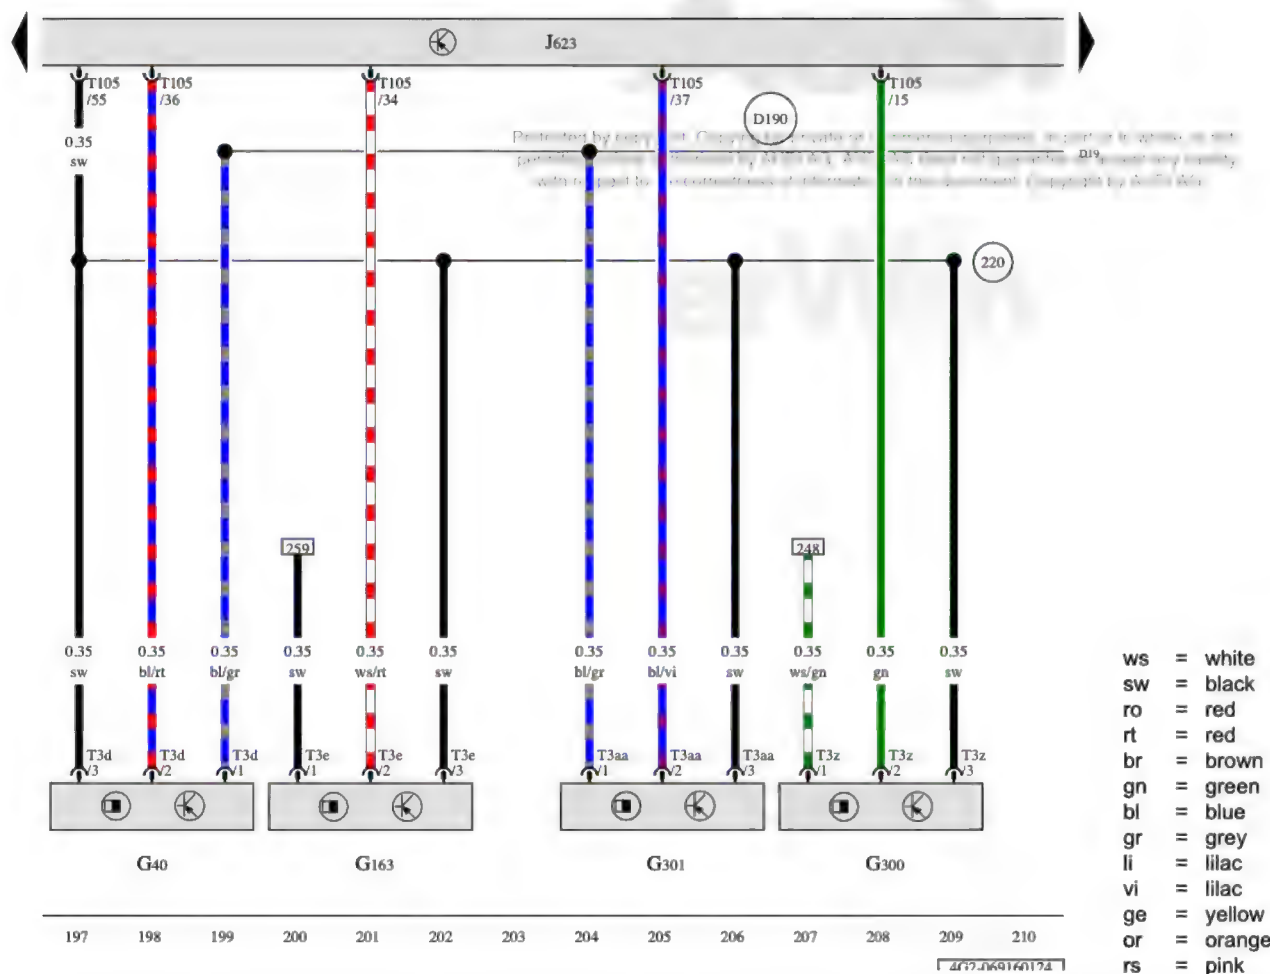


Low Fuel Pressure Sensor, Secondary Air Injection
Sensor 1, Engine/Motor Control Module

- G410 Low Fuel Pressure Sensor
- G609 Secondary Air Injection Sensor 1
- J623 Engine/Motor Control Module
- T3f 3-Pin Connector
- T3i 3-Pin Connector
- T105 105-Pin Connector, Black

327 Sensor Ground Connection (in Engine/Motor Compartment Wiring Harness)

D190 Connection 3 (5V) (in Engine Pre-Wiring Harness)

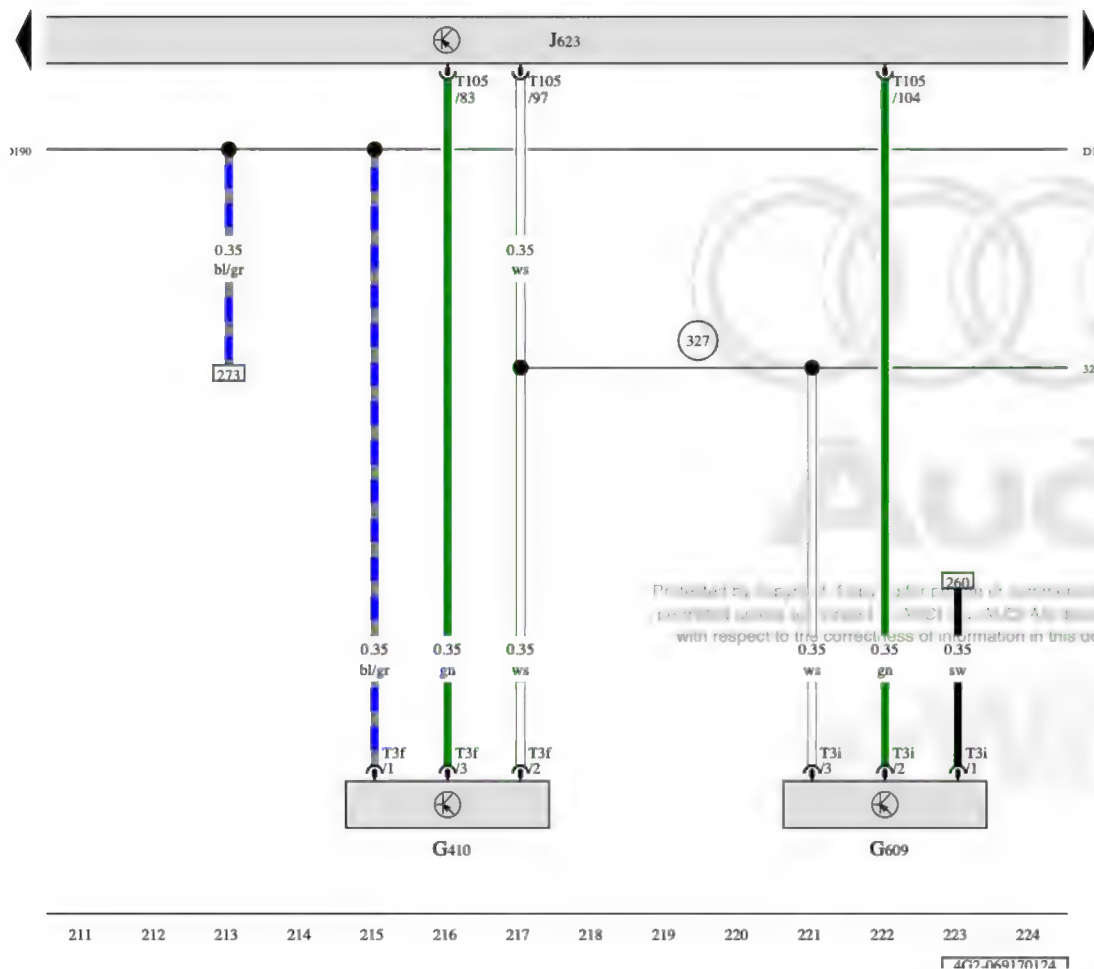



Engine Coolant Temperature Sensor, Engine Coolant Temperature Sensor on Radiator Outlet, Oil Temperature Sensor 2, Engine Temperature Control Sensor, Engine/Motor Control Module

- G62 Engine Coolant Temperature Sensor
- G83 Engine Coolant Temperature Sensor on Radiator Outlet
- G664 Oil Temperature Sensor 2
- G694 Engine Temperature Control Sensor
- J623 Engine/Motor Control Module
- T2eo 2-Pin Connector
- T2gb 2-Pin Connector
- T2gc 2-Pin Connector
- T2nw 2-Pin Connector
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black

327 Sensor Ground Connection (in Engine/Motor Compartment Wiring Harness)

D190 Connection 3 (5V) (in Engine Pre-Wiring Harness)

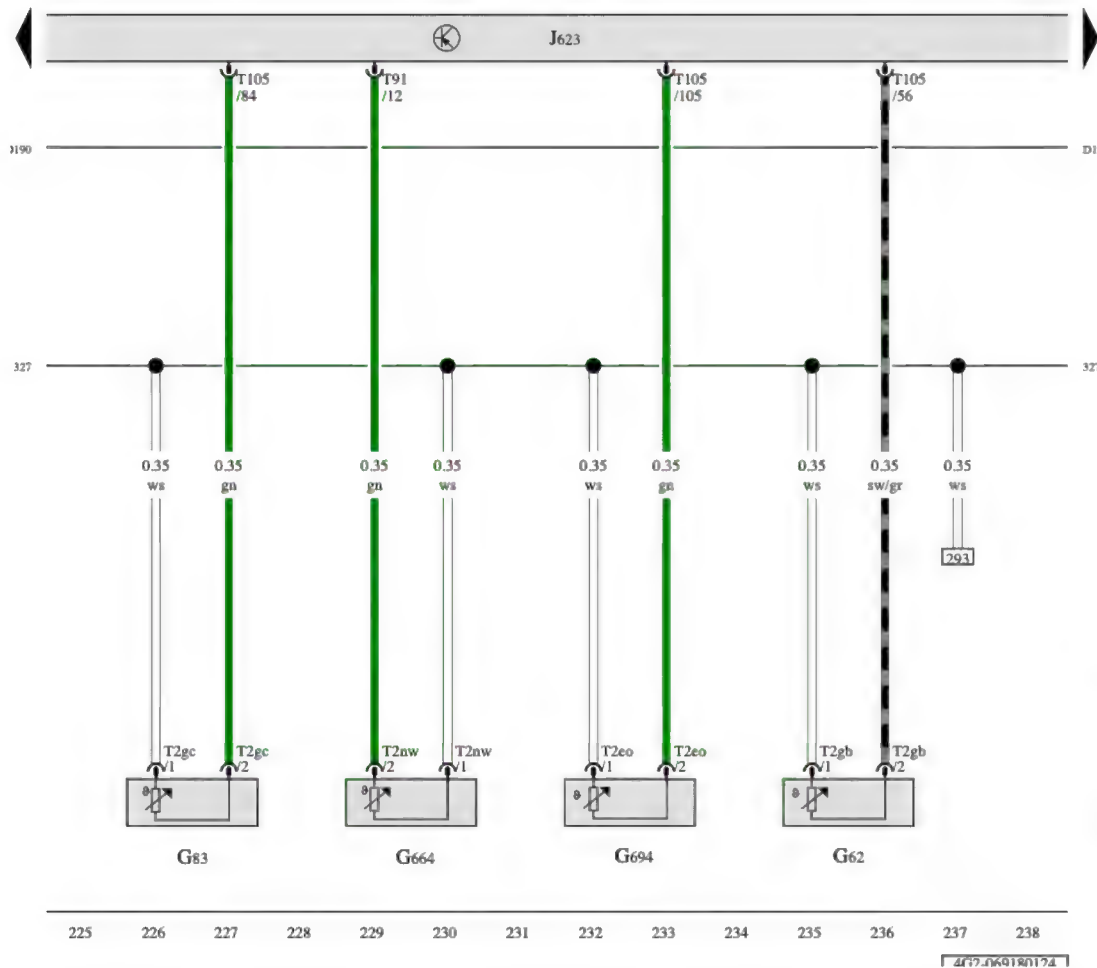

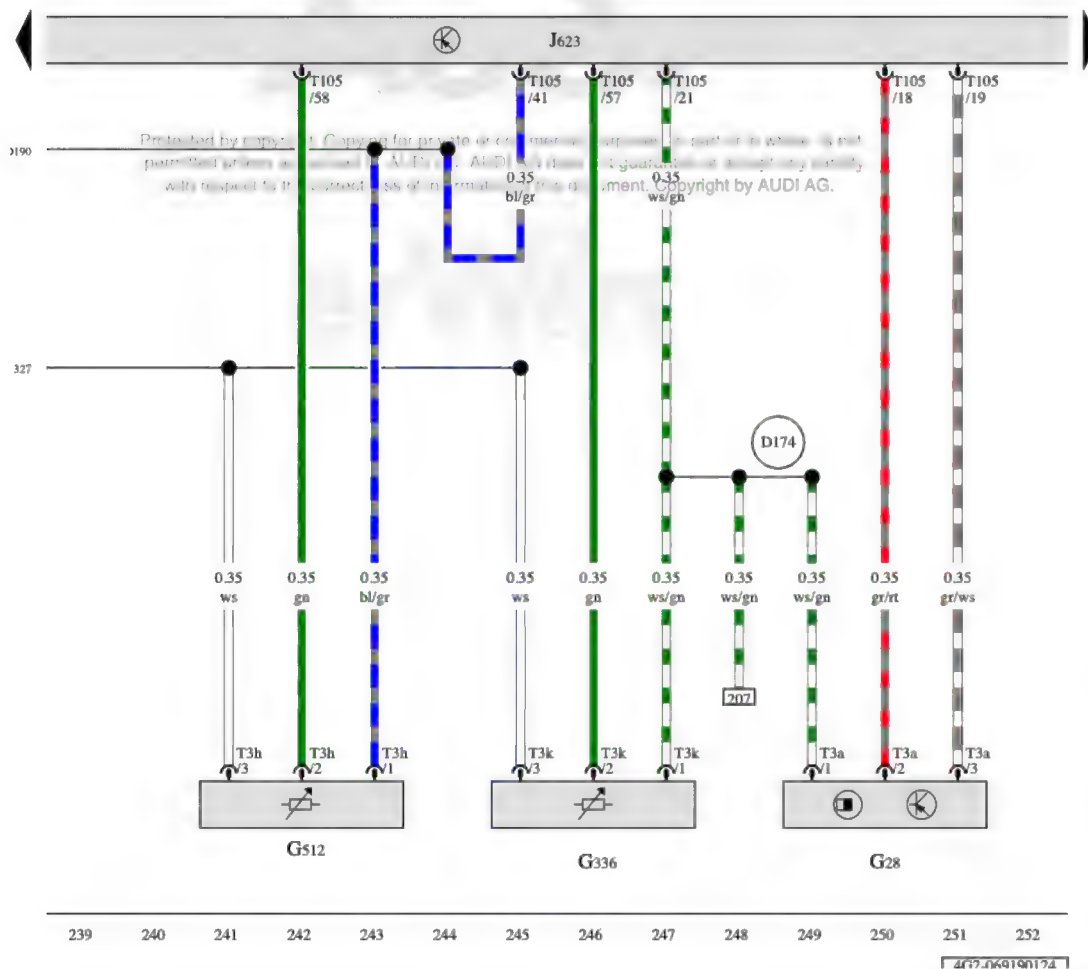

Engine Speed Sensor, Intake Manifold Runner Position Sensor, Intake Manifold Runner Position Sensor 2, Engine/Motor Control Module

- G28 Engine Speed Sensor
- G336 Intake Manifold Runner Position Sensor
- G512 Intake Manifold Runner Position Sensor 2
- J623 Engine/Motor Control Module
- T3a 3-Pin Connector
- T3h 3-Pin Connector
- T3k 3-Pin Connector
- T105 105-Pin Connector, Black


- 327 Sensor Ground Connection (in Engine/Motor Compartment Wiring Harness)
- D174 Connection 2 (5V) (in Engine Pre-Wiring Harness)
- D190 Connection 3 (5V) (in Engine Pre-Wiring Harness)

Manifold Absolute Pressure Sensor, Fuel Pressure Sensor, Engine/Motor Control Module

- G71 Manifold Absolute Pressure Sensor
- G247 Fuel Pressure Sensor
- J623 Engine/Motor Control Module
- T3g 3-Pin Connector
- T4q 4-Pin Connector
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black

316 Sensor Ground Connection 2 (in Engine Wiring Harness)

D141 Connection 5V (in Engine Pre-Wiring Harness)

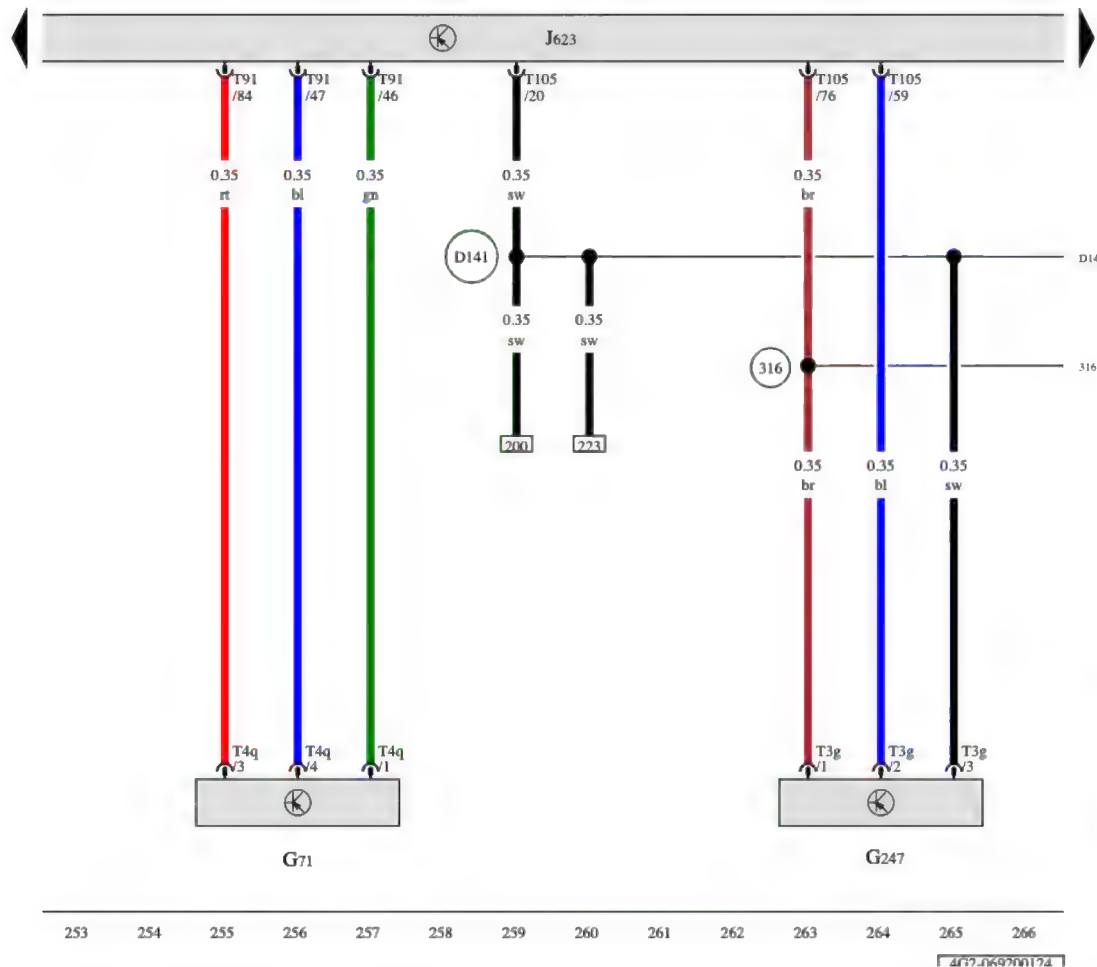


Charge Air Pressure Sensor, Charge Air Pressure Sensor 2, Fuel Pressure Sensor 2, Engine/Motor Control Module

- G31 Charge Air Pressure Sensor
- G447 Charge Air Pressure Sensor 2
- G624 Fuel Pressure Sensor 2
- J623 Engine/Motor Control Module
- T3bz 3-Pin Connector
- T4ev 4-Pin Connector
- T4fl 4-Pin Connector
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black

316 Sensor Ground Connection 2 (in Engine Wiring Harness)


D141 Connection 5V (in Engine Pre-Wiring Harness)

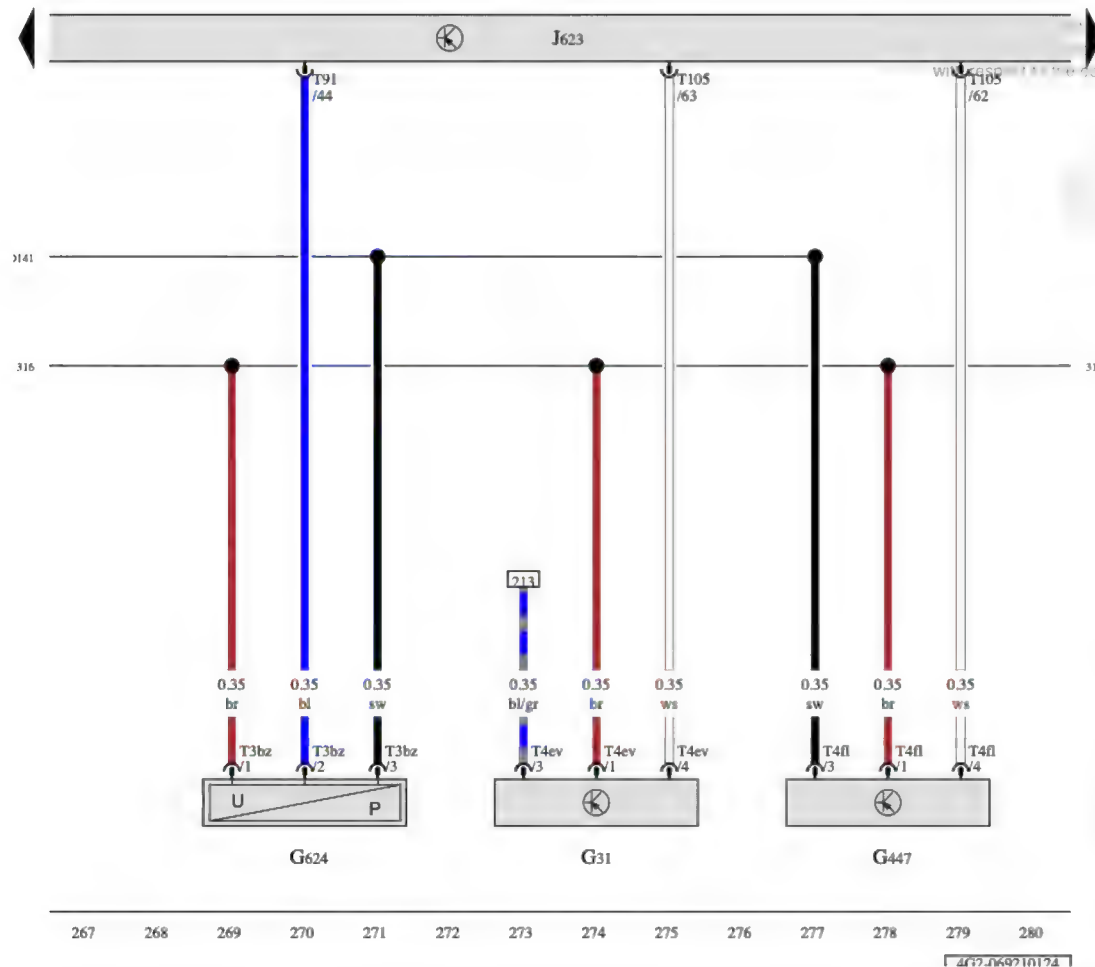

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Intake Air Temperature Sensor, Charge Air Cooler
Temperature Sensor 1, Engine Cover Temperature
Sensor, Engine/Motor Control Module

- G42 Intake Air Temperature Sensor
- G763 Charge Air Cooler Temperature Sensor 1
- G764 Charge Air Cooler Temperature Sensor 2
- G765 Engine Cover Temperature Sensor
- J623 Engine/Motor Control Module
- T2lp 2-Pin Connector
- T2oa 2-Pin Connector
- T2ob 2-Pin Connector
- T2oc 2-Pin Connector
- T8ay 8-Pin Connector, In the Engine/Motor Compartment, Left Front
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black

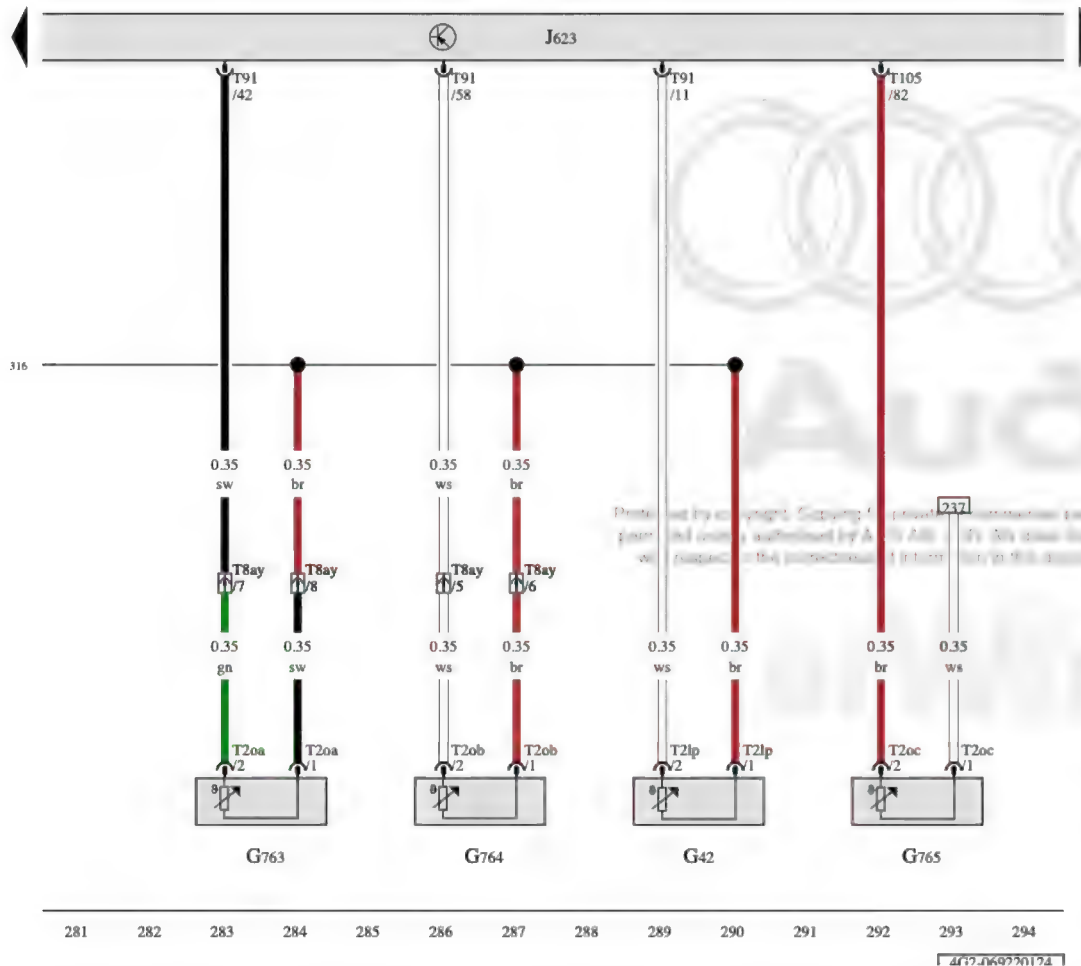


316 Sensor Ground Connection 2 (in Engine Wiring Harness)

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Map Controlled Engine Cooling Thermostat, Engine/Motor Control Module, Secondary Air Injection Solenoid Valve, Secondary Air Injection Solenoid Valve 2, Oil Pressure Regulation Valve, Cylinder Head Coolant Valve, Piston Cooling Nozzle Control Valve

- F265 Map Controlled Engine Cooling Thermostat
- J623 Engine/Motor Control Module
- N112 Secondary Air Injection Solenoid Valve
- N320 Secondary Air Injection Solenoid Valve 2
- N428 Oil Pressure Regulation Valve
- N489 Cylinder Head Coolant Valve
- N522 Piston Cooling Nozzle Control Valve
- T2gl 2-Pin Connector
- T2h 2-Pin Connector
- T2k 2-Pin Connector
- T2nk 2-Pin Connector
- T2np 2-Pin Connector
- T2r 2-Pin Connector
- T8ay 8-Pin Connector, In the Engine/Motor Compartment, Left Front
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black

D111 Connection 9 (in Engine/Motor Compartment Wiring Harness)

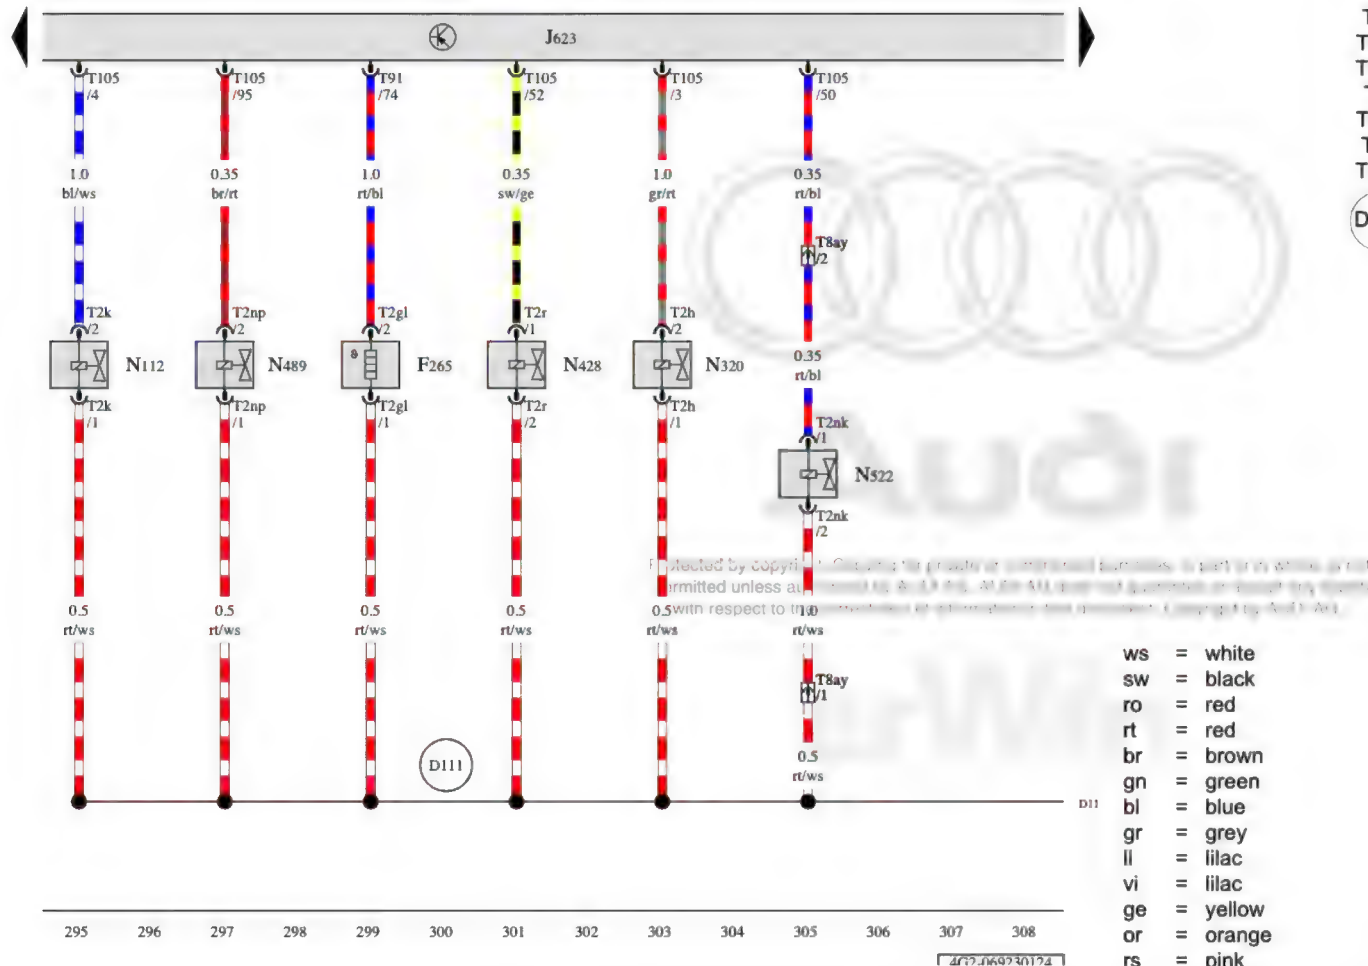


Engine/Motor Control Module, After-Run Coolant Pump,
Engine Coolant Circulation Pump 2, Charge Air Cooling
Pump

- J623 Engine/Motor Control Module
- T3ca 3-Pin Connector
- T3cb 3-Pin Connector
- T3l 3-Pin Connector
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black
- V51 After-Run Coolant Pump
- V178 Engine Coolant Circulation Pump 2
- V188 Charge Air Cooling Pump

167 Ground Connection 4 (in Engine/Motor Compartment Wiring Harness)

D111 Connection 9 (in Engine/Motor Compartment Wiring Harness)

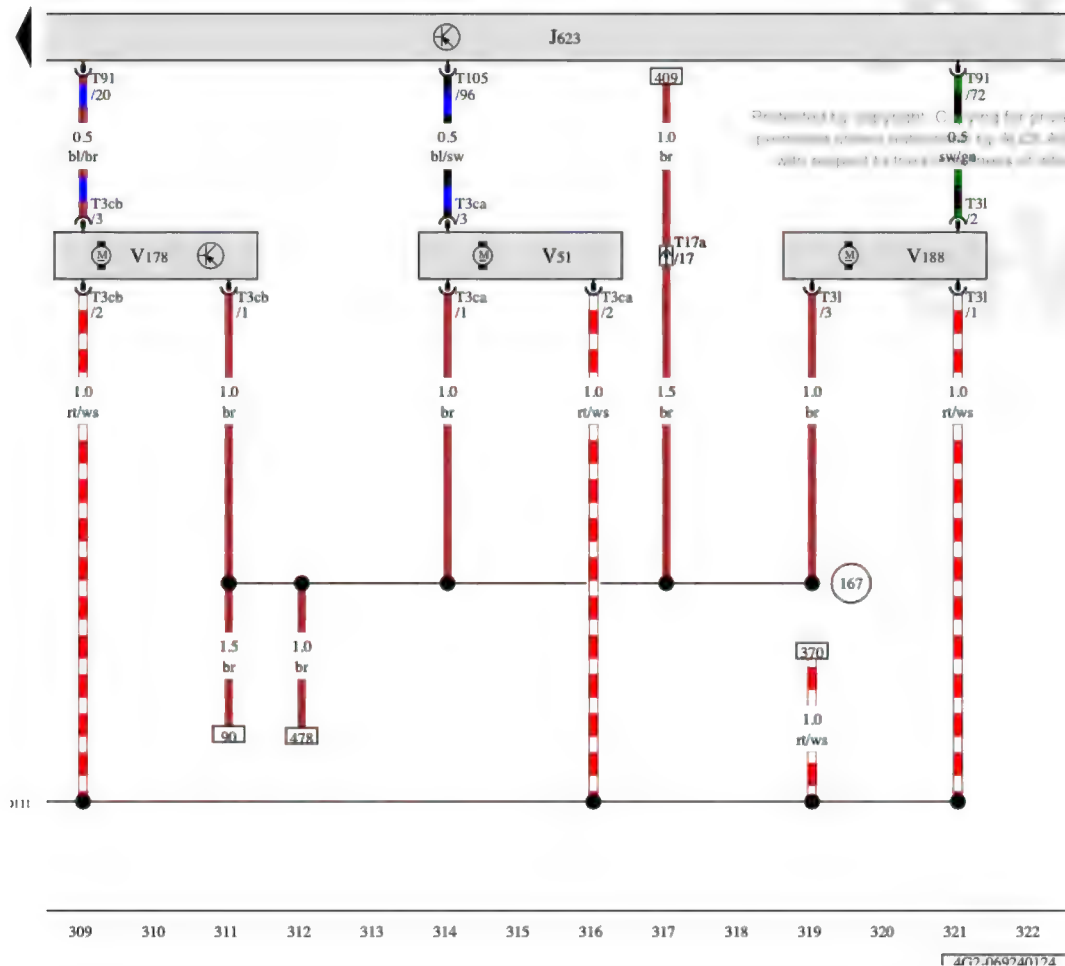


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- ll = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Engine/Motor Control Module, Wastegate Bypass
Regulator Valve, Camshaft Adjustment Valve 1, Fuel
Metering Valve, Exhaust Camshaft Adjustment Valve 1

- J623 Engine/Motor Control Module
- N75 Wastegate Bypass Regulator Valve
- N205 Camshaft Adjustment Valve 1
- N208 Camshaft Adjustment Valve 2
- N290 Fuel Metering Valve
- N318 Exhaust Camshaft Adjustment Valve 1
- N319 Exhaust Camshaft Adjustment Valve 2
- N402 Fuel Metering Valve 2
- T2ed 2-Pin Connector
- T2eg 2-Pin Connector
- T2l 2-Pin Connector
- T2lo 2-Pin Connector
- T2o 2-Pin Connector
- T2od 2-Pin Connector
- T2p 2-Pin Connector
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black

D112 Connection 10 (in Engine/Motor Compartment Wiring Harness)


D117 Connection 15 (in Engine/Motor Compartment Wiring Harness)

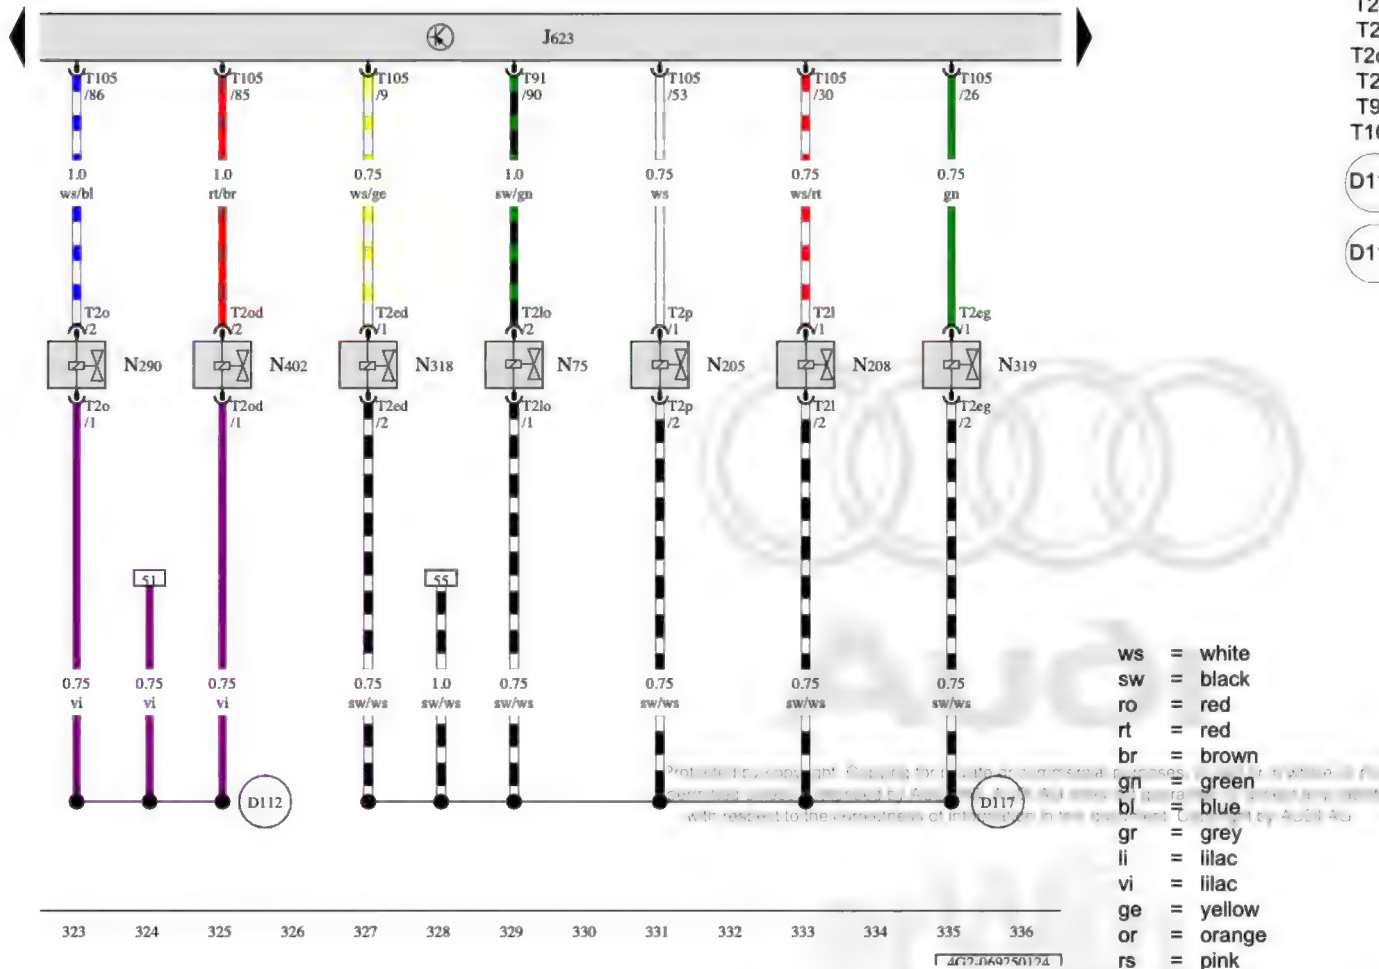

Cylinder 2 Intake Cam Actuator 2, Engine/Motor Control Module

- F452 Cylinder 2 Intake Cam Actuator 1
- F453 Cylinder 2 Intake Cam Actuator 2
- F454 Cylinder 2 Exhaust Cam Actuator 1
- F455 Cylinder 2 Exhaust Cam Actuator 2
- J623 Engine/Motor Control Module
- T2oe 2-Pin Connector
- T2of 2-Pin Connector
- T2og 2-Pin Connector
- T2oh 2-Pin Connector
- T105 105-Pin Connector, Black

D180 Connection 87A (in Engine/Motor Compartment Wiring Harness)

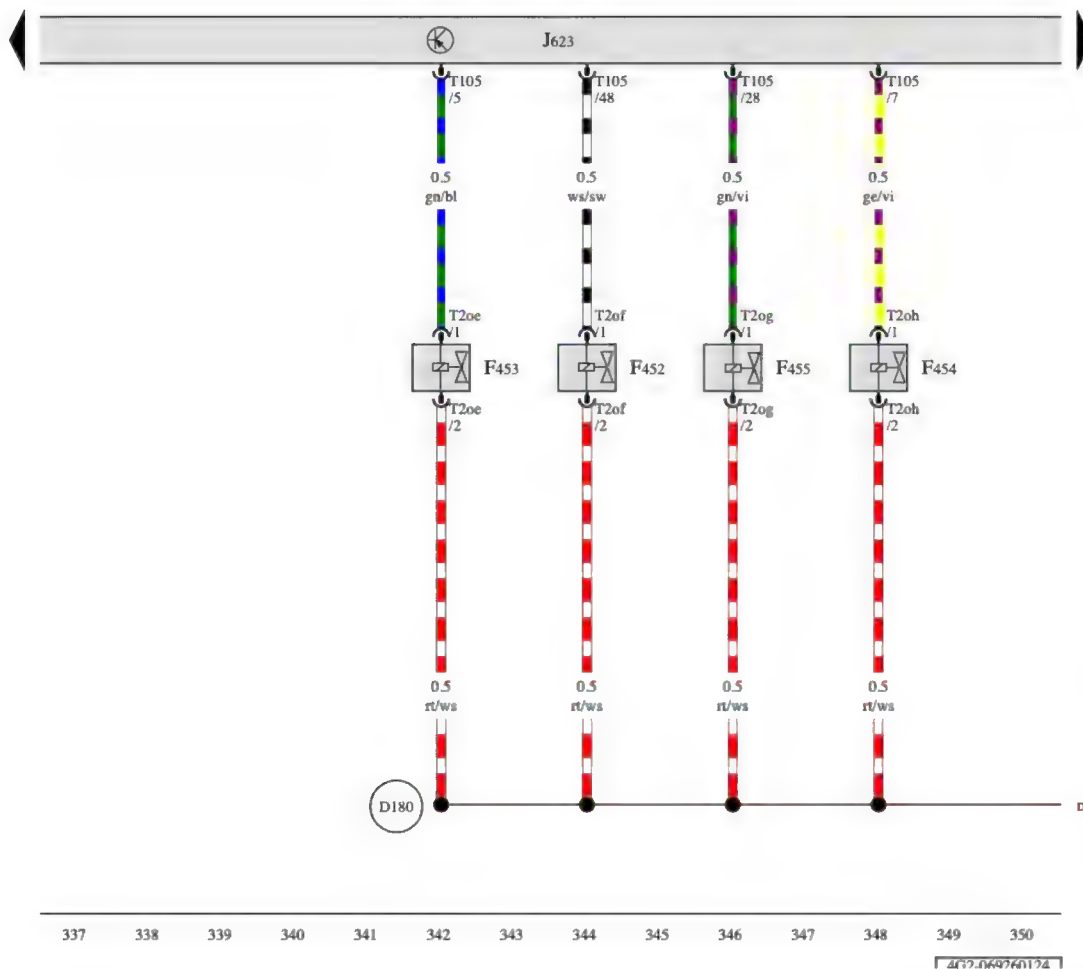



- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Cylinder 3 Intake Cam Actuator 2, Engine/Motor Control Module

- F456 Cylinder 3 Intake Cam Actuator 1
- F457 Cylinder 3 Intake Cam Actuator 2
- F458 Cylinder 3 Exhaust Cam Actuator 1
- F459 Cylinder 3 Exhaust Cam Actuator 2
- J623 Engine/Motor Control Module
- T2oi 2-Pin Connector
- T2oj 2-Pin Connector
- T2ok 2-Pin Connector
- T2ol 2-Pin Connector
- T105 105-Pin Connector, Black

D180 Connection 87A (in Engine/Motor Compartment Wiring Harness)

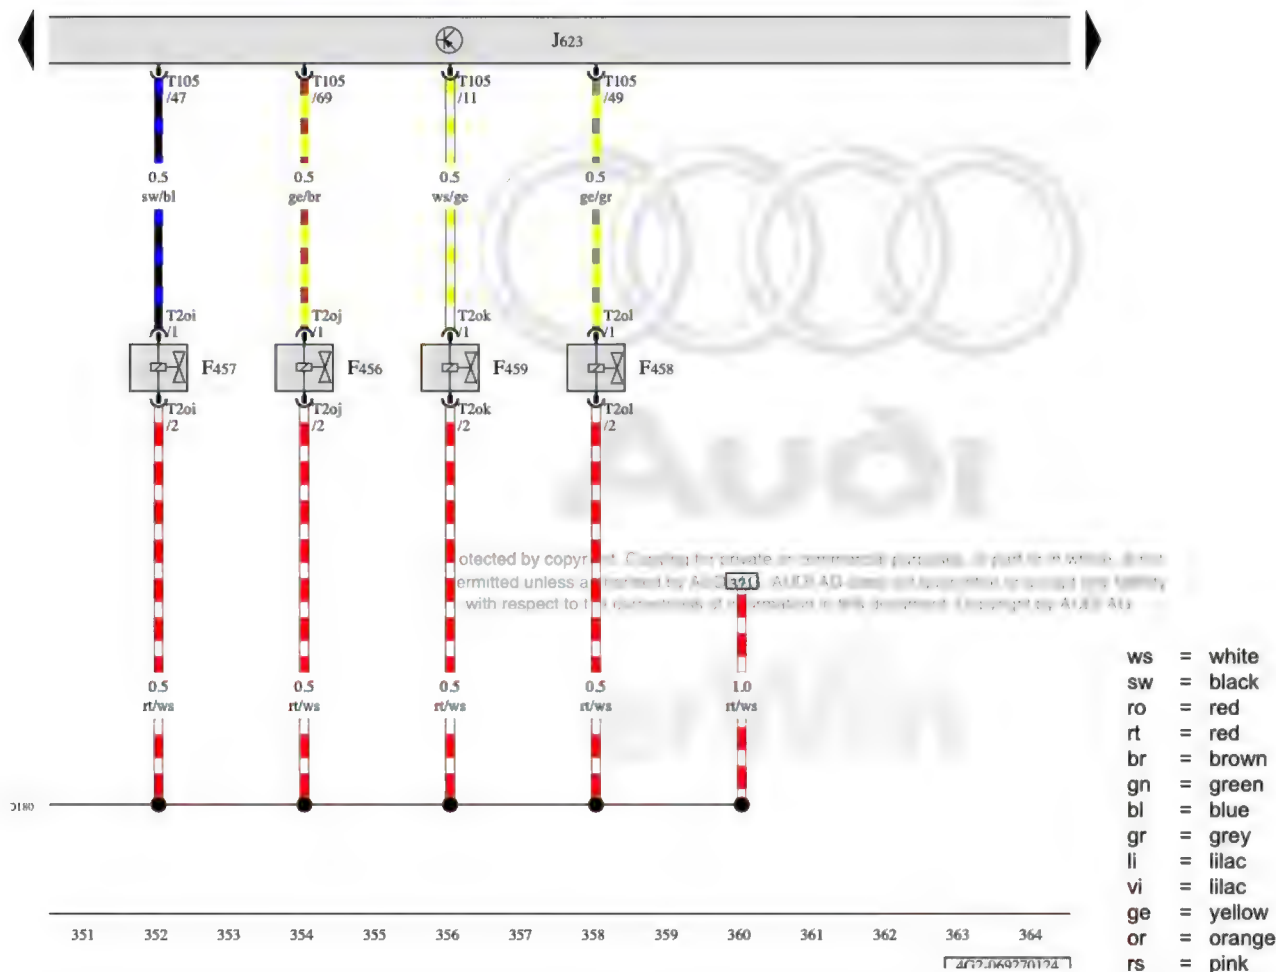

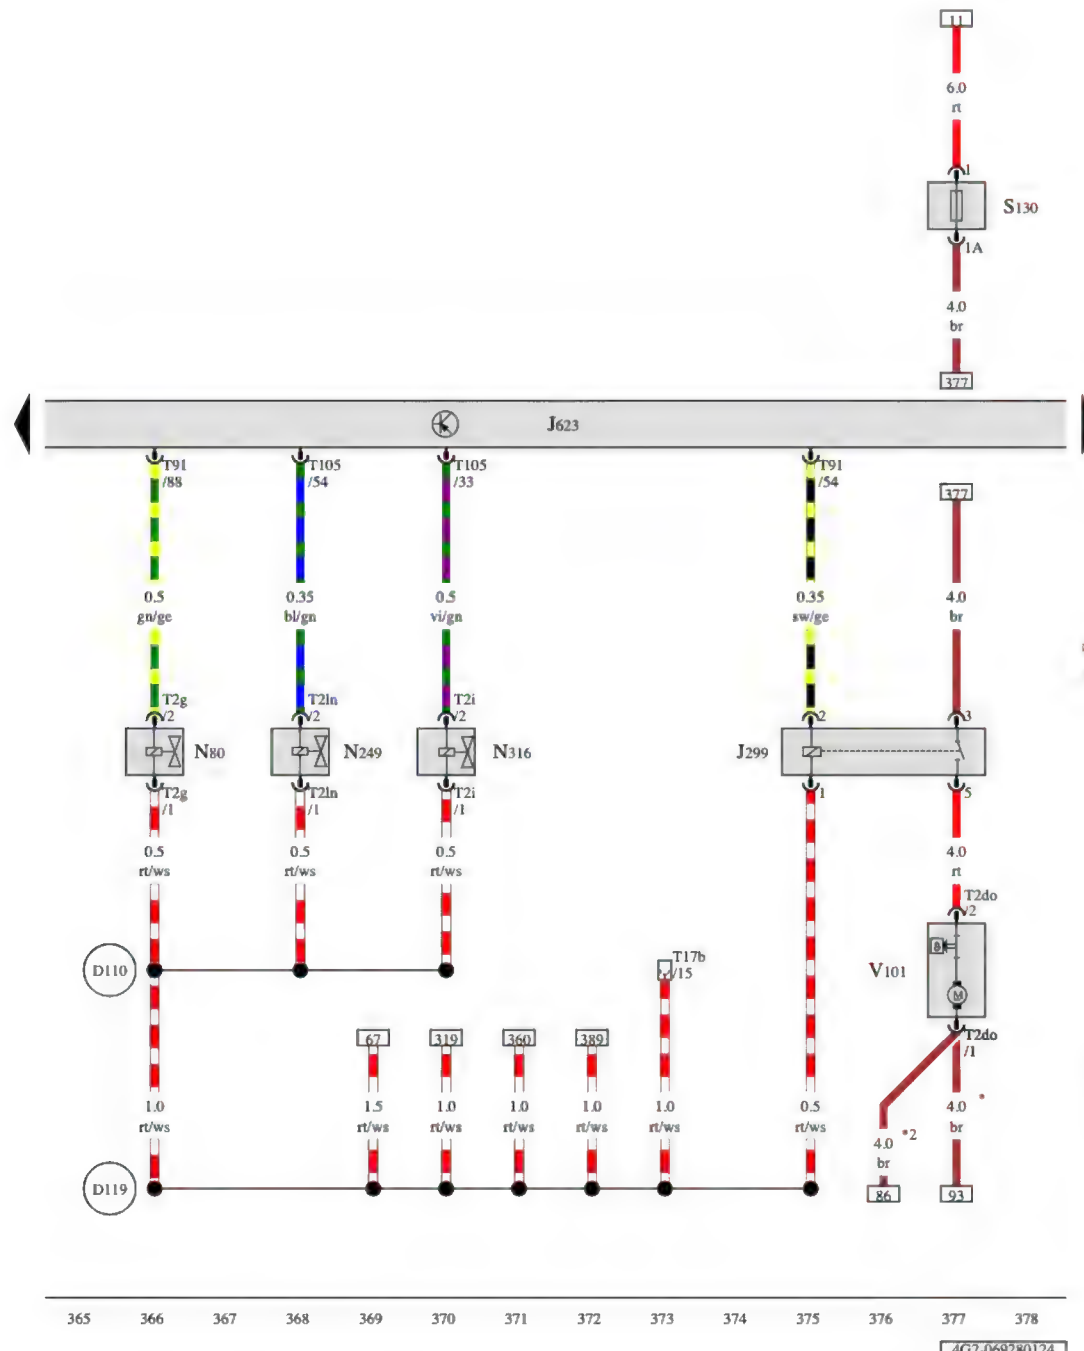

Secondary Air Injection Pump Relay, Engine/Motor Control Module, EVAP Canister Purge Regulator Valve 1, Turbocharger Recirculation Valve, Intake Manifold Runner Control Valve, Secondary Air Injection Pump Fuse


- J299 Secondary Air Injection Pump Relay
- J623 Engine/Motor Control Module
- N80 EVAP Canister Purge Regulator Valve 1
- N249 Turbocharger Recirculation Valve
- N316 Intake Manifold Runner Control Valve
- S130 Secondary Air Injection Pump Fuse
- T2do 2-Pin Connector
- T2g 2-Pin Connector
- T2i 2-Pin Connector
- T2ln 2-Pin Connector
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, Red
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black
- V101 Secondary Air Injection Pump Motor
- D110 Connection 8 (in Engine/Motor Compartment Wiring Harness)
- D119 Connection 17 (in Engine/Motor Compartment Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the written permission of Audi AG. From June 2014 *2 Through May 2014

Cylinder 5 Intake Cam Actuator 2, Engine/Motor Control Module

- F464 Cylinder 5 Intake Cam Actuator 1
- F465 Cylinder 5 Intake Cam Actuator 2
- F466 Cylinder 5 Exhaust Cam Actuator 1
- F467 Cylinder 5 Exhaust Cam Actuator 2
- J623 Engine/Motor Control Module
- N427 Turbocharger Recirculation Valve Bank 2
- T2om 2-Pin Connector
- T2on 2-Pin Connector
- T2oo 2-Pin Connector
- T2op 2-Pin Connector
- T2oq 2-Pin Connector
- T105 105-Pin Connector, Black


D113 Connection 11 (in Engine/Motor Compartment Wiring Harness)

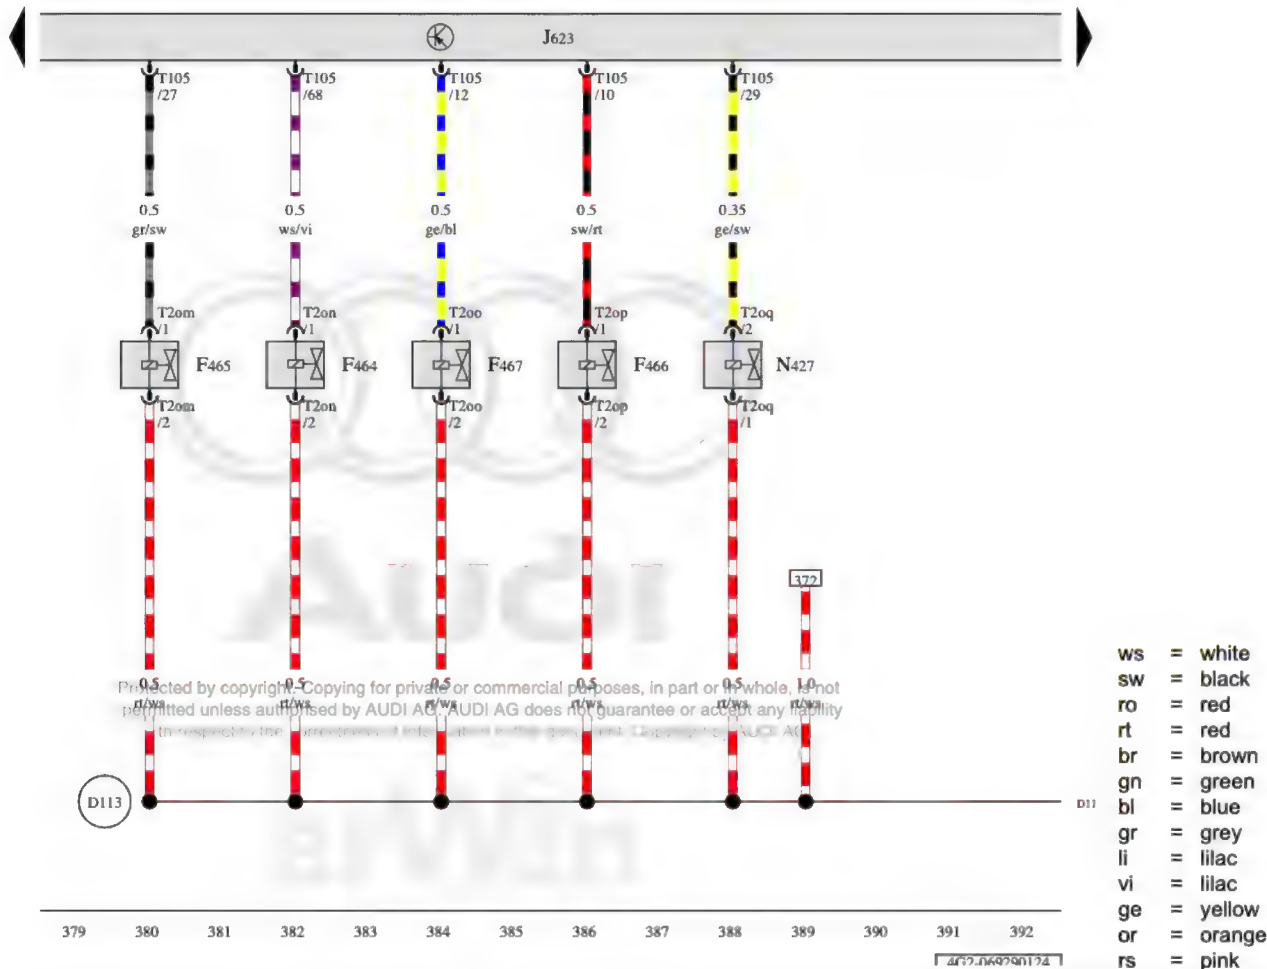

Oil Pressure Switch, Level 3, Cylinder 8 Intake Cam
Actuator 2, Engine/Motor Control Module

- F447 Oil Pressure Switch, Level 3
- F476 Cylinder 8 Intake Cam Actuator 1
- F477 Cylinder 8 Intake Cam Actuator 2
- F478 Cylinder 8 Exhaust Cam Actuator 1
- F479 Cylinder 8 Exhaust Cam Actuator 2
- J623 Engine/Motor Control Module
- T1e 1-Pin Connector
- T2or 2-Pin Connector
- T2os 2-Pin Connector
- T2ot 2-Pin Connector
- T2ou 2-Pin Connector
- T8ay 8-Pin Connector, In the Engine/Motor Compartment, Left Front
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black

D113 Connection 11 (in Engine/Motor Compartment Wiring Harness)

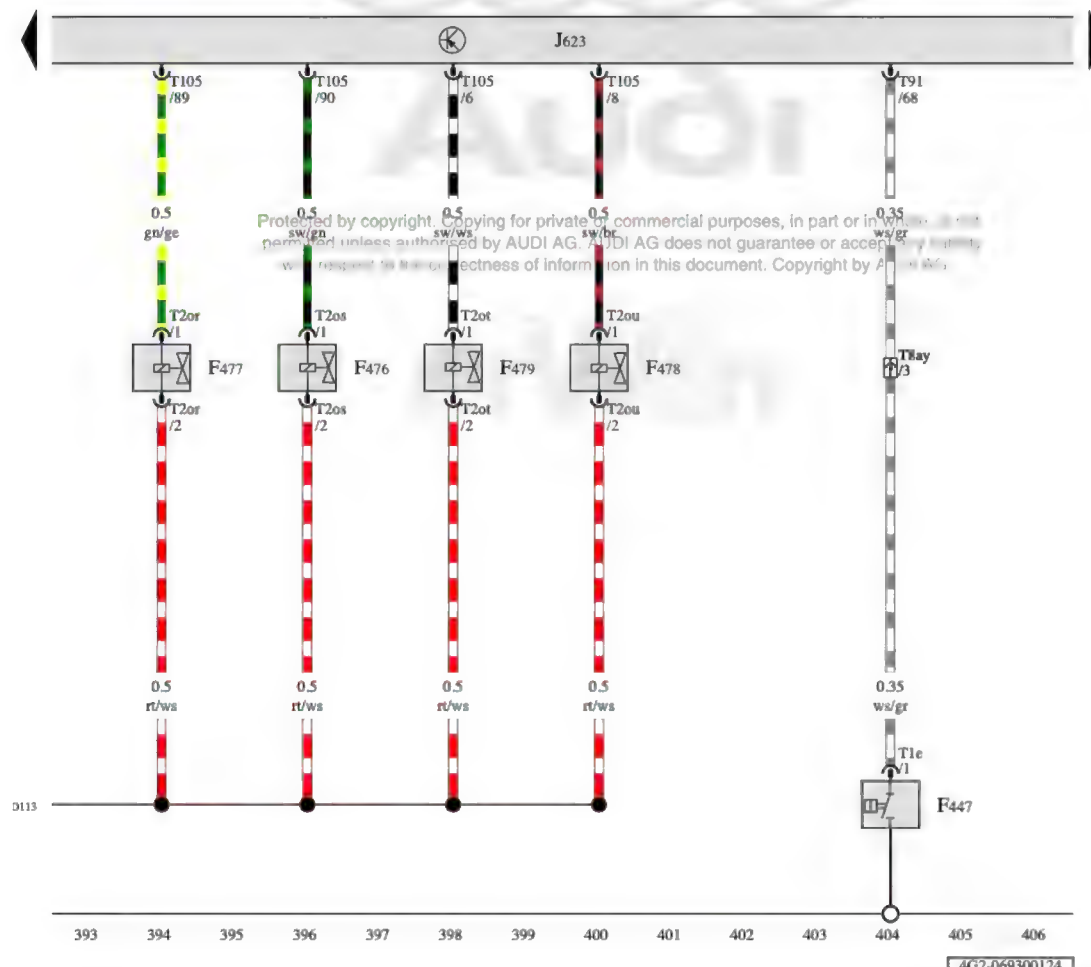


Engine/Motor Control Module, Exhaust Door Control Unit,
Exhaust Door Control Unit 2

- J623 Engine/Motor Control Module
- J883 Exhaust Door Control Unit
- J945 Exhaust Door Control Unit 2
- ST3 Fuse Panel 3
- SB4 Fuse 4 (On Fuse Panel B)
- T3cc 3-Pin Connector
- T3cd 3-Pin Connector
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, Red
- T91 91-Pin Connector, Black

397 Ground Connection 32 (in Main Wiring Harness)

X171 Connection 15 (in Rear Bumper Wiring Harness)


* Refer to Applicable Wiring Diagram for Fuse Positions

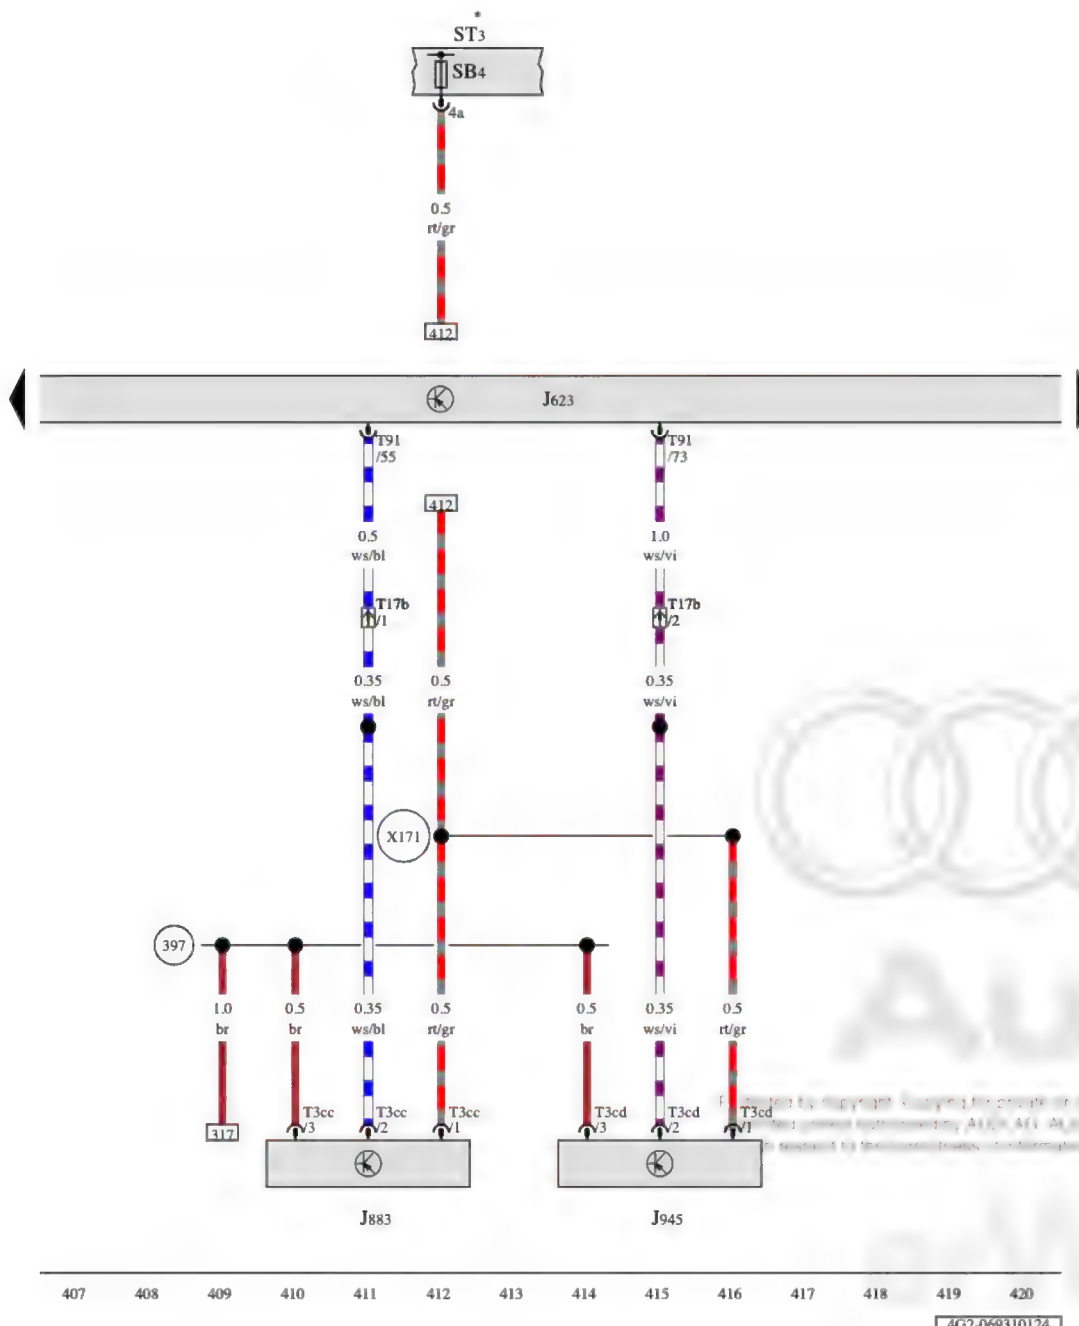

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Heated Oxygen Sensor, Heated Oxygen Sensor 2,
Engine/Motor Control Module


- G39 Heated Oxygen Sensor
- G108 Heated Oxygen Sensor 2
- J623 Engine/Motor Control Module
- T5bc 5-Pin Connector, Brown
- T5bd 5-Pin Connector, Black
- T91 91-Pin Connector, Black
- Z19 Oxygen Sensor Heater
- Z28 Oxygen Sensor 2 Heater
- D114 Connection 12 (in Engine/Motor Compartment Wiring Harness)

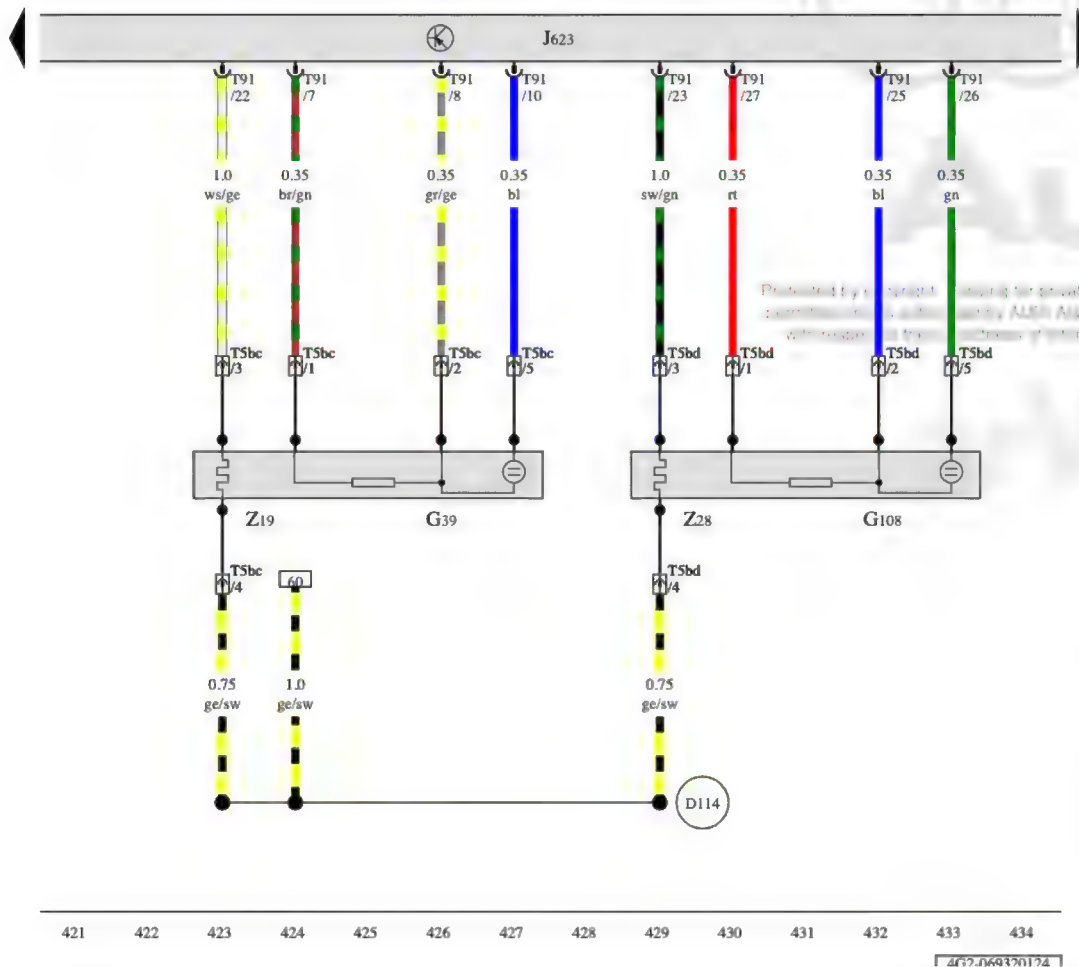

Oil Pressure Switch, Reduced Oil Pressure Switch,
Oxygen Sensor After Catalytic Converter, Oxygen Sensor
2 After Catalytic Converter, Engine/Motor Control Module

- F22 Oil Pressure Switch
- F378 Reduced Oil Pressure Switch
- G130 Oxygen Sensor After Catalytic Converter
- G131 Oxygen Sensor 2 After Catalytic Converter
- J623 Engine/Motor Control Module
- T1b 1-Pin Connector
- T1d 1-Pin Connector
- T4l 4-Pin Connector, Black
- T4m 4-Pin Connector, Brown
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black
- Z29 Heater for Oxygen Sensor 1 After Catalytic Converter
- Z30 Heater for Oxygen Sensor 2 After Catalytic Converter

- D115 Connection 13 (in Engine/Motor Compartment Wiring Harness)
- 0.9 Bar
- *2 2.6 Bar

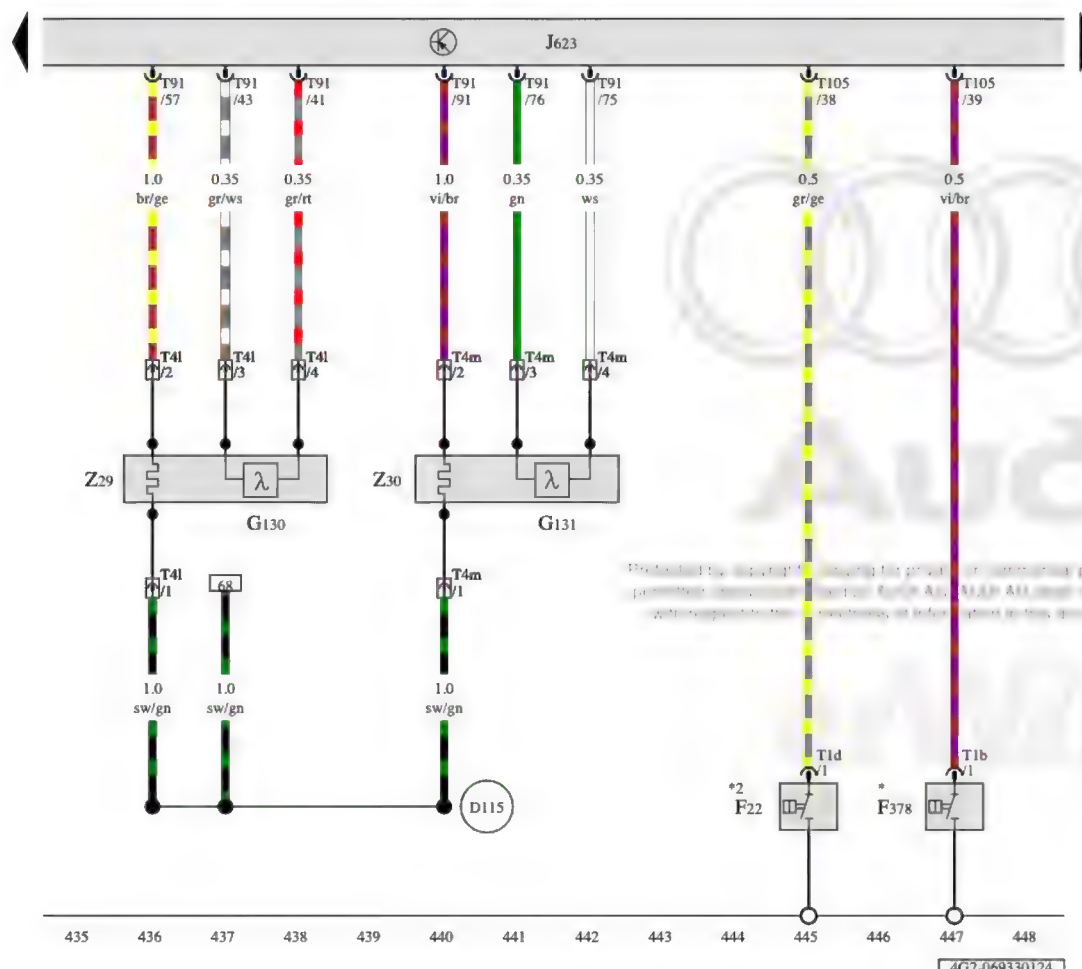


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Brake Lamp Switch, Engine/Motor Control Module, Fuel Tank Leak Detection Control Module

- F Brake Lamp Switch
- G400 Fuel Tank Pressure Sensor
- J623 Engine/Motor Control Module
- J909 Fuel Tank Leak Detection Control Module
- SF2 Fuse 2 (On Fuse Panel F)
- ST3 Fuse Panel 3
- SB3 Fuse 3 (On Fuse Panel B)
- SF6 Fuse 6 (On Fuse Panel F)
- T3s 3-Pin Connector
- T4ak 4-Pin Connector, Black
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, Red
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station, Black
- T17o 17-Pin Connector, In the Connector Station, Right A-Pillar, Black
- T91 91-Pin Connector, Black

- 45 Ground Connection Behind Instrument Panel, Center
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- B335 Connection 54 (in Main Wiring Harness) 1
- B635 Positive Connection 3 (87) (in Main Wiring Harness)
- * For Vehicles with Fuel System Diagnostic Pump
- *2 Refer to Applicable Wiring Diagram for Fuse Positions
- *3 Through May 2014
- *4 From June 2014

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

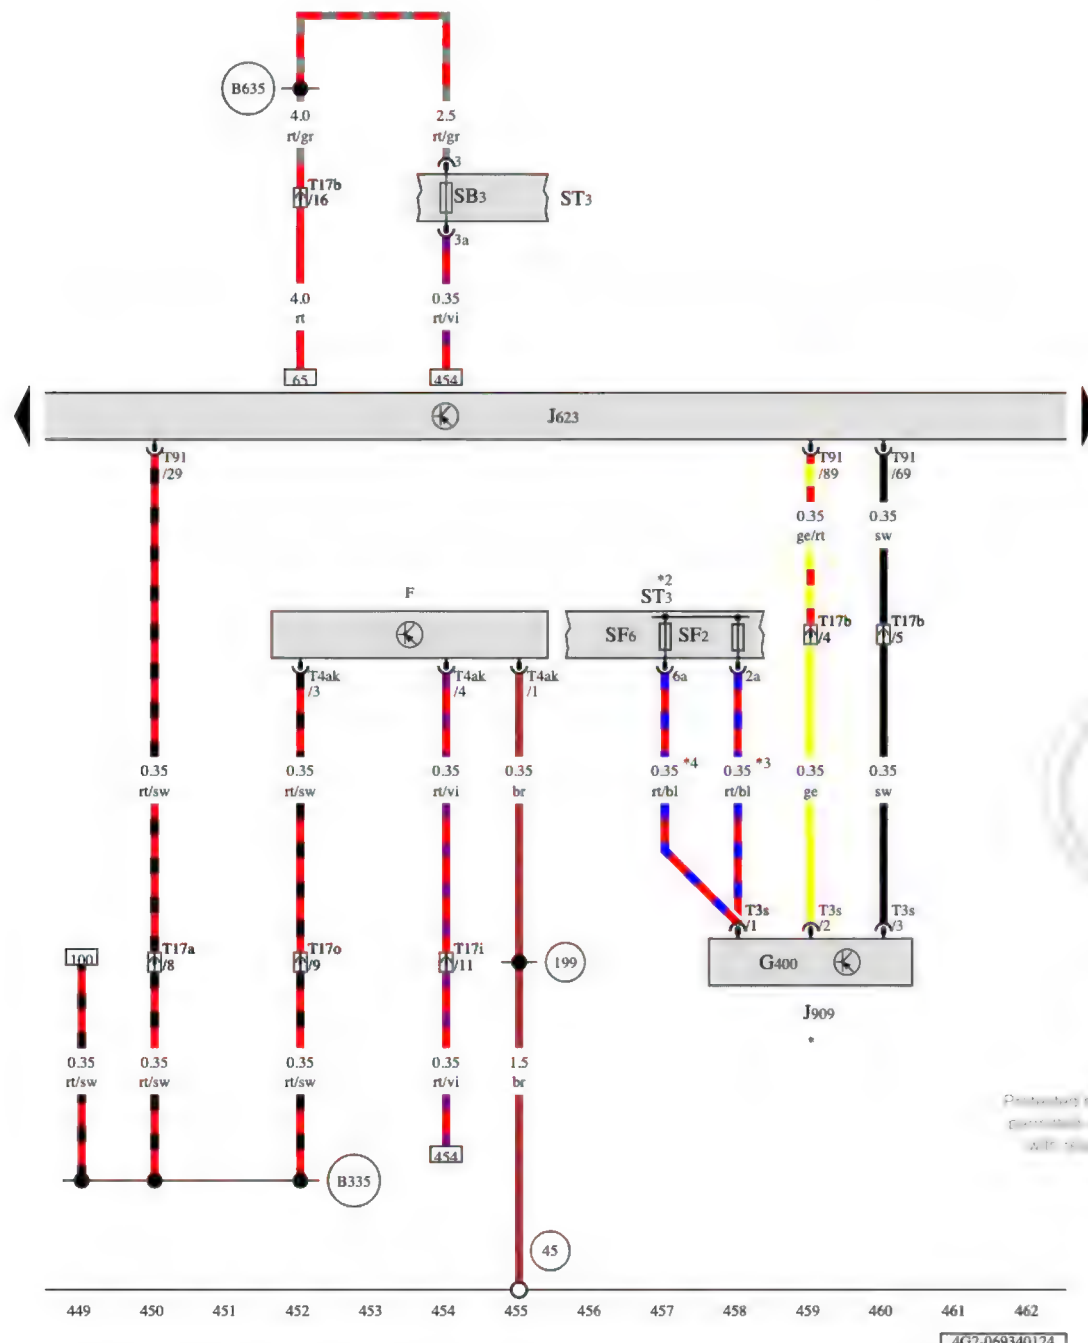


Radiator Fan Control Module, Engine/Motor Control Module, Radiator Fan Control Module 2, Radiator Fan

- J293 Radiator Fan Control Module
- J623 Engine/Motor Control Module
- J671 Radiator Fan Control Module 2
- T4bf 4-Pin Connector, On the Radiator Fan
- T4bg 4-Pin Connector, On the Radiator Fan
- T4fm 4-Pin Connector, Near the Radiator Fan
- T4fn 4-Pin Connector, Near the Radiator Fan
- T5 5-Pin Connector, In the Center Plenum Chamber, Black
- T91 91-Pin Connector, Black
- V7 Radiator Fan
- V177 Radiator Fan 2

685 Ground Connection 1 on Right Front Longitudinal Member


K21 Connection 1 (in Radiator Fan Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by Audi AG. Audi AG is not responsible for any errors, omissions, or damages resulting from the use of the information in this document. Copyright by Audi AG.

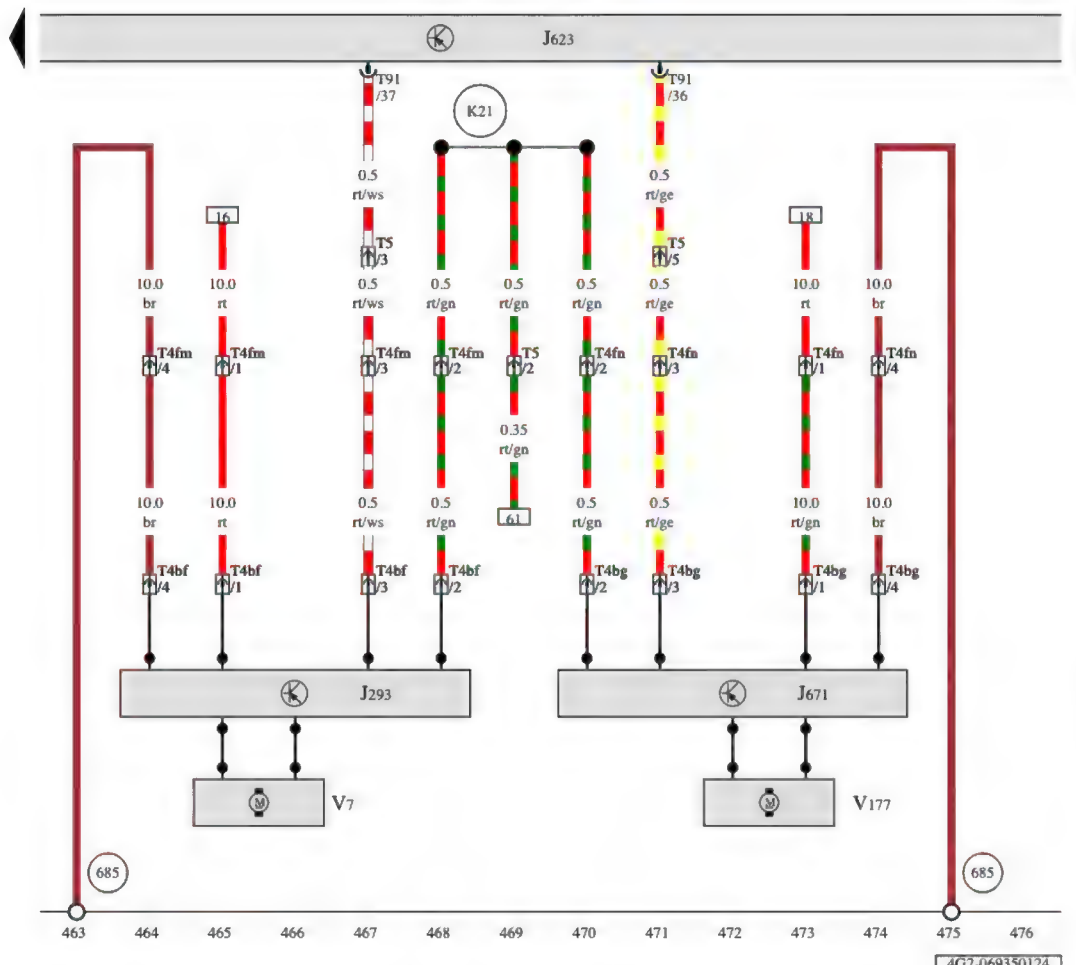

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Transfer Fuel Pump, Oil Level Thermal Sensor, Fuel Pump Control Module, Engine/Motor Control Module

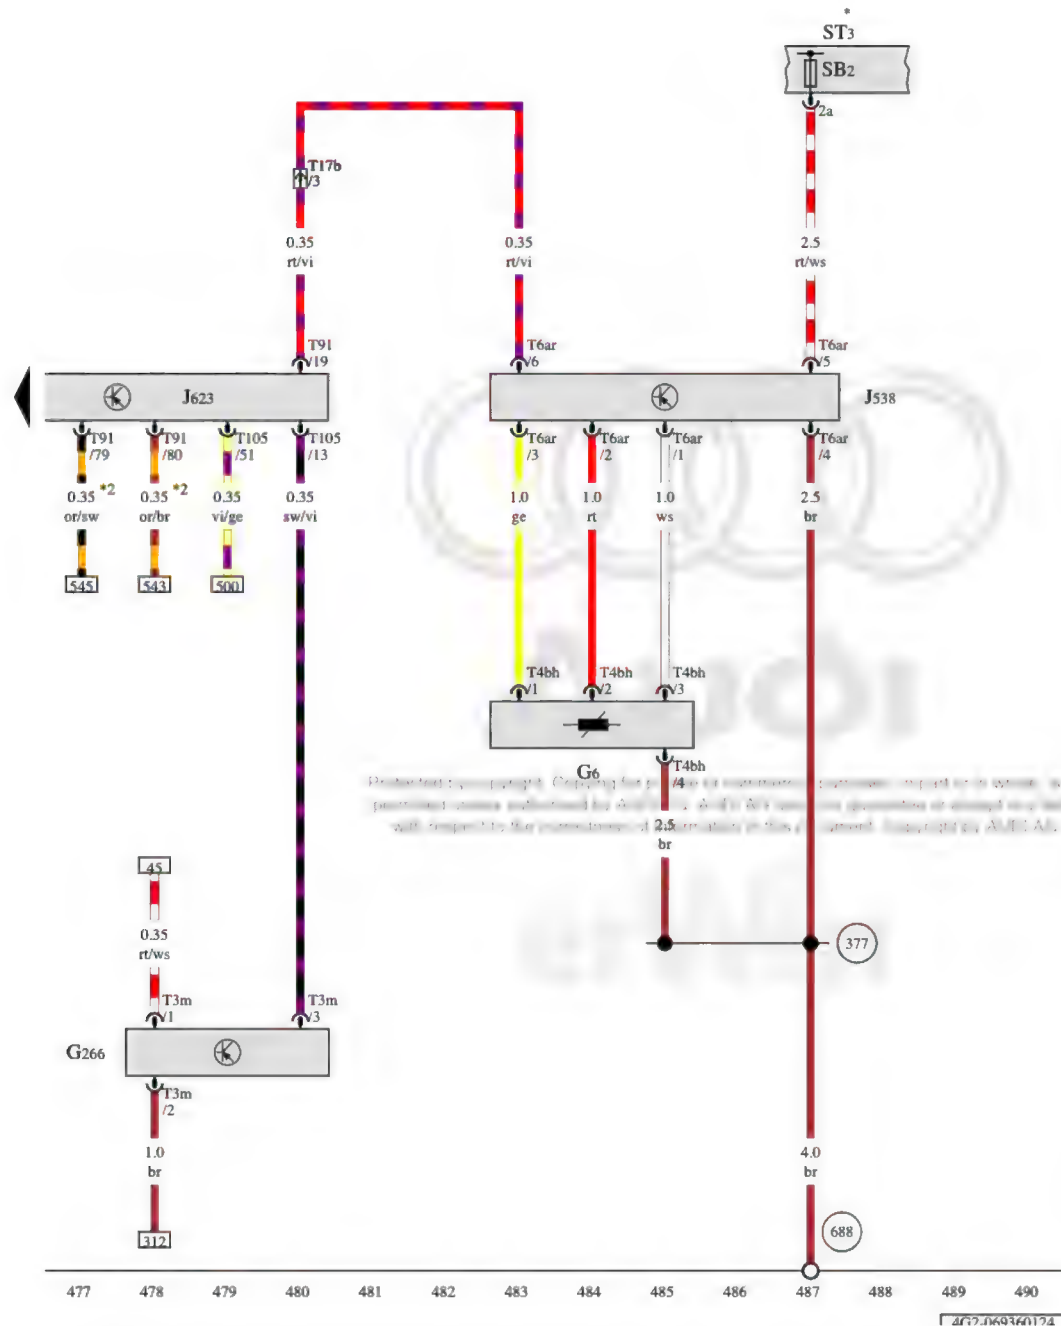


- G6 Transfer Fuel Pump
- G266 Oil Level Thermal Sensor
- J538 Fuel Pump Control Module
- J623 Engine/Motor Control Module
- SB2 Fuse 2 (On Fuse Panel B)
- ST3 Fuse Panel 3
- T3m 3-Pin Connector, Black
- T4bh 4-Pin Connector, Black
- T6ar 6-Pin Connector, Black
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, Red
- T91 91-Pin Connector, Black
- T105 105-Pin Connector, Black

377 Ground Connection 12 (in Main Wiring Harness)

688 Ground Connection 2 on Center Tunnel

- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Data Bus Wire (CAN Bus)

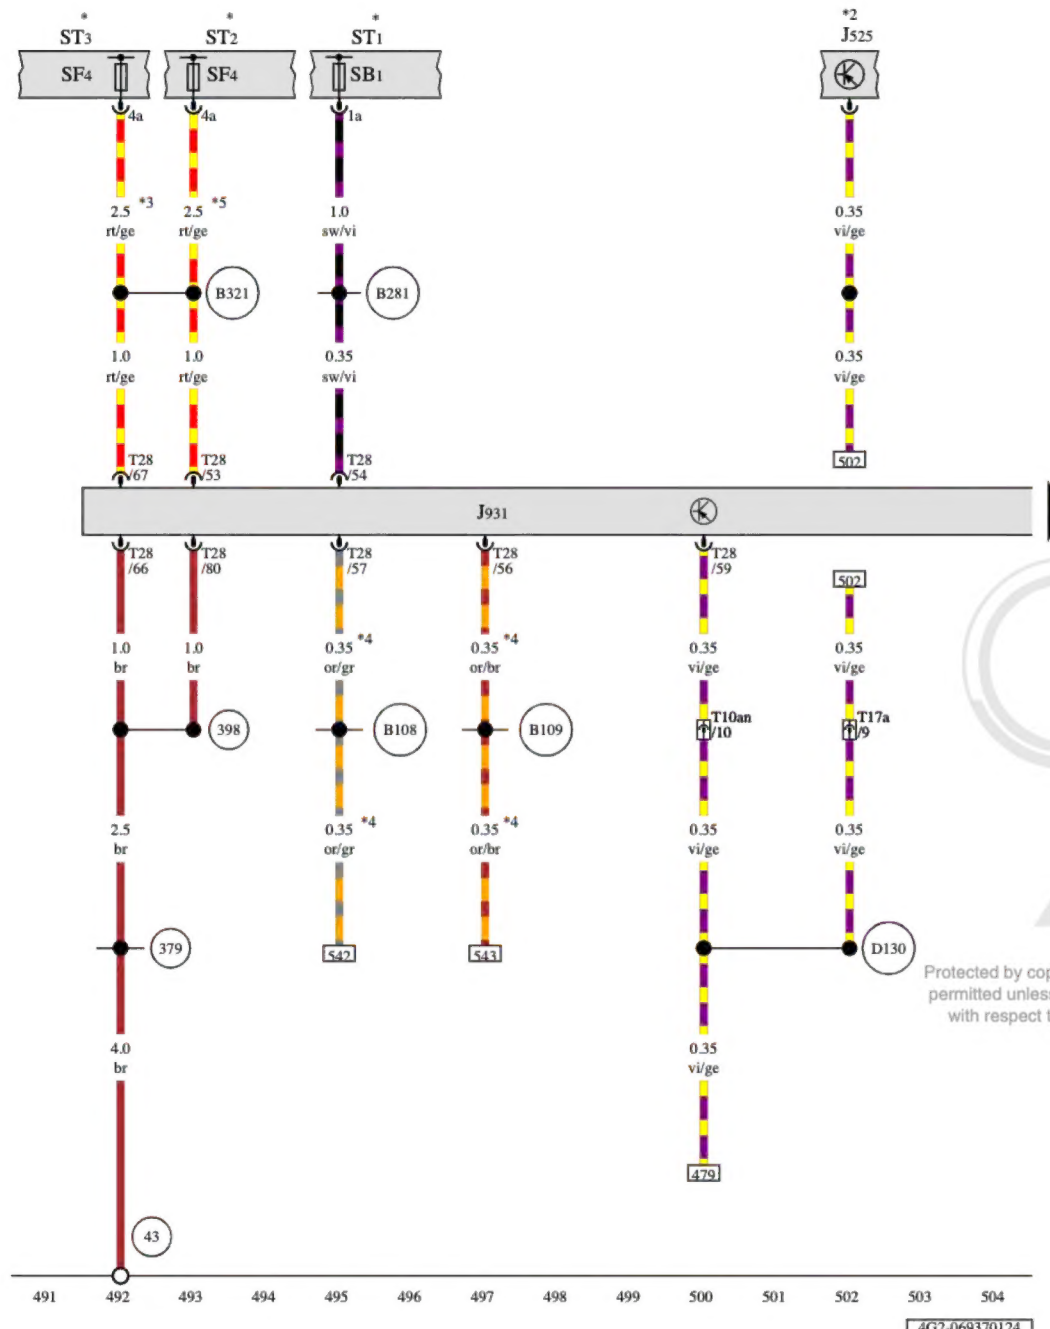

Assembly Mount Control Module

- J525 Digital Sound System Control Module
- J931 Assembly Mount Control Module
- ST1 Fuse Panel 1
- SB1 Fuse 1 (On Fuse Panel B)
- ST2 Fuse Panel 2
- ST3 Fuse Panel 3
- SF4 Fuse 4 (On Fuse Panel F)
- T10an 10-Pin Connector, On the Right Front Longitudinal Member, Behind the Wheel Housing Liner, Black
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
- T28 28-Pin Connector
- 43 Ground Connection on A-Pillar, Lower Right
- 379 Ground Connection 14 (in Main Wiring Harness)
- 398 Ground Connection 33 (in Main Wiring Harness)
- B108 CAN Bus Extended High Connection 1 (in Main Wiring Harness)
- B109 CAN Bus Extended Low Connection 1 (in Main Wiring Harness)
- B281 Positive Connection 5 (15a) (in Main Wiring Harness)
- B321 Positive Connection 7 (30a) (in Main Wiring Harness)
- D130 Connection 28 (in Engine/Motor Compartment Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Refer to Applicable Sound System Wiring Diagram Through May 2014
- *3 Data Bus Wire (CAN-Bus) From June 2014
- *4
- *5


Protected by copyright. Copying for private or commercial purposes is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of the information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Assembly Mount Sensor 1, Assembly Mount Sensor 2,
Assembly Mount Control Module, Assembly Mount
Actuator 1

- G748 Assembly Mount Sensor 1
- G749 Assembly Mount Sensor 2
- J931 Assembly Mount Control Module
- N513 Assembly Mount Actuator 1
- N514 Assembly Mount Actuator 2
- T2ov 2-Pin Connector
- T2ow 2-Pin Connector
- T3ce 3-Pin Connector
- T3cf 3-Pin Connector
- T10an 10-Pin Connector, On the Right Front Longitudinal Member,
Behind the Wheel Housing Liner, Black
- T28 28-Pin Connector

D129 Connection 27 (in Engine/Motor Compartment Wiring Harness)

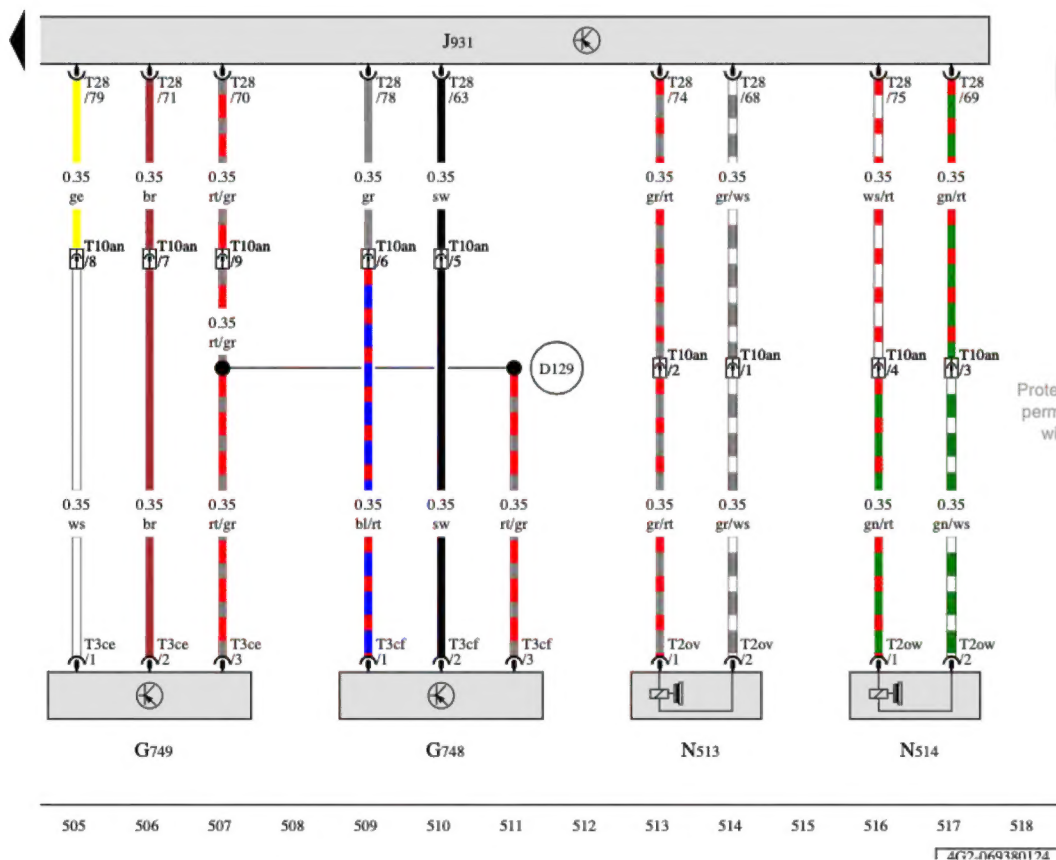


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Fuel Gauge, Fuel Level Sensor 2, Instrument Cluster Control Module

- G Fuel Level Sensor
- G1 Fuel Gauge
- G169 Fuel Level Sensor 2
- J285 Instrument Cluster Control Module
- T6aq 6-Pin Connector, Black
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station, Red
- T17o 17-Pin Connector, In the Connector Station, Right A-Pillar, Black
- T32 32-Pin Connector
- Y24 Display Unit in Instrument Cluster

- 411 Sensor Ground Connection 2 (in Main Wiring Harness)
- A204 Instrument Cluster CAN Bus High Connection (in Instrument Panel Wiring Harness)
- A205 Instrument Cluster CAN Bus Low Connection (in Instrument Panel Wiring Harness)
- * Data Bus Wire (CAN Bus)

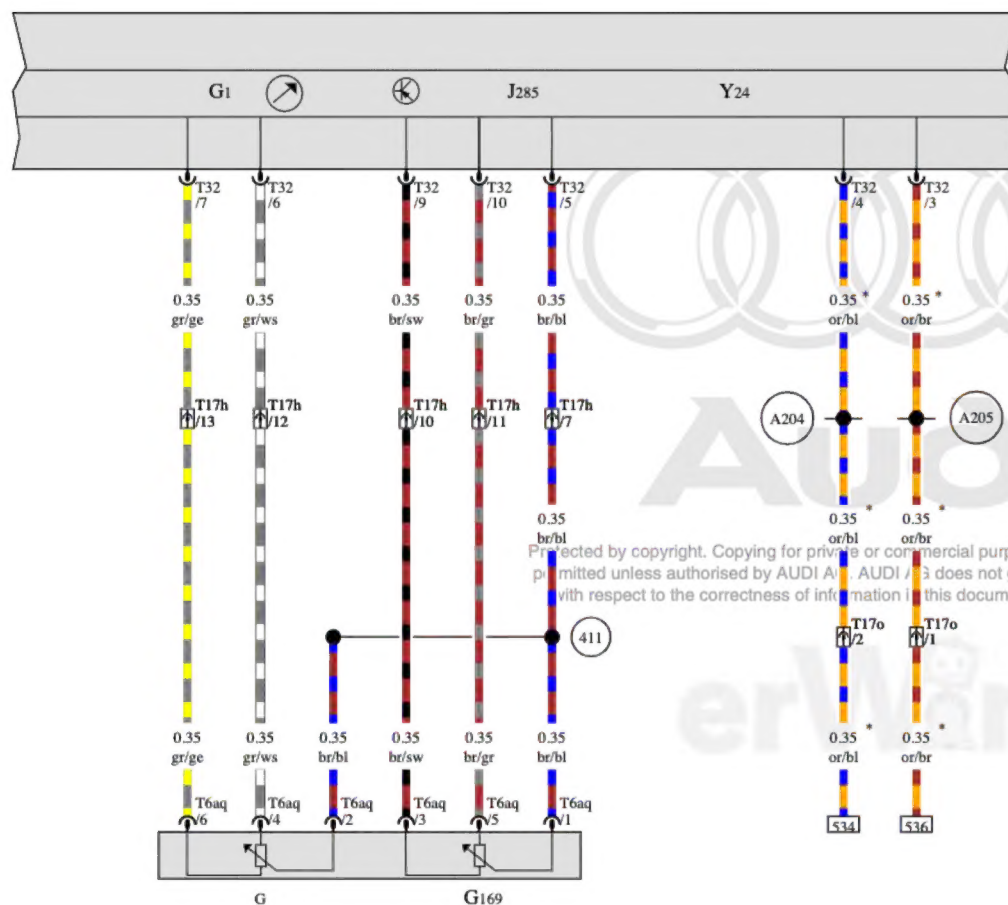


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

519 520 521 522 523 524 525 526 527 528 529 530 531 532

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

Powertrain CAN Bus High Wire Junction, Powertrain CAN Bus High Wire Junction 2, Instrument Cluster CAN Bus High Wire Junction 2

- J217 Transmission Control Module
J533 Data Bus on Board Diagnostic Interface
T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
T32b 32-Pin Connector
T46a 46-Pin Connector, Black
T46b 46-Pin Connector, Black
TV33 Powertrain CAN Bus High Wire Junction
TV37 Powertrain CAN Bus Low Wire Junction
TV79 Powertrain CAN Bus High Wire Junction 2
TV81 Instrument Cluster CAN Bus High Wire Junction 2
TV82 Powertrain CAN Bus Low Wire Junction 2
TV84 Instrument Cluster CAN Bus Low Wire Junction 2
B383 Powertrain CAN Bus High Connection 1 (in Main Wiring Harness)
B390 Powertrain CAN Bus Low Connection 1 (in Main Wiring Harness)
B708 Instrument Cluster CAN Bus High Connection 1 (in Main Wiring Harness)
B709 Instrument Cluster CAN Bus Low Connection 1 (in Main Wiring Harness)
E93 CAN Bus High Connection 1 (in Engine Wiring Harness)
E94 CAN Bus Low Connection 1 (in Engine Wiring Harness)
* Refer to Applicable Wiring Diagram for Automatic Transmission Data Bus Wire (CAN Bus)
*2

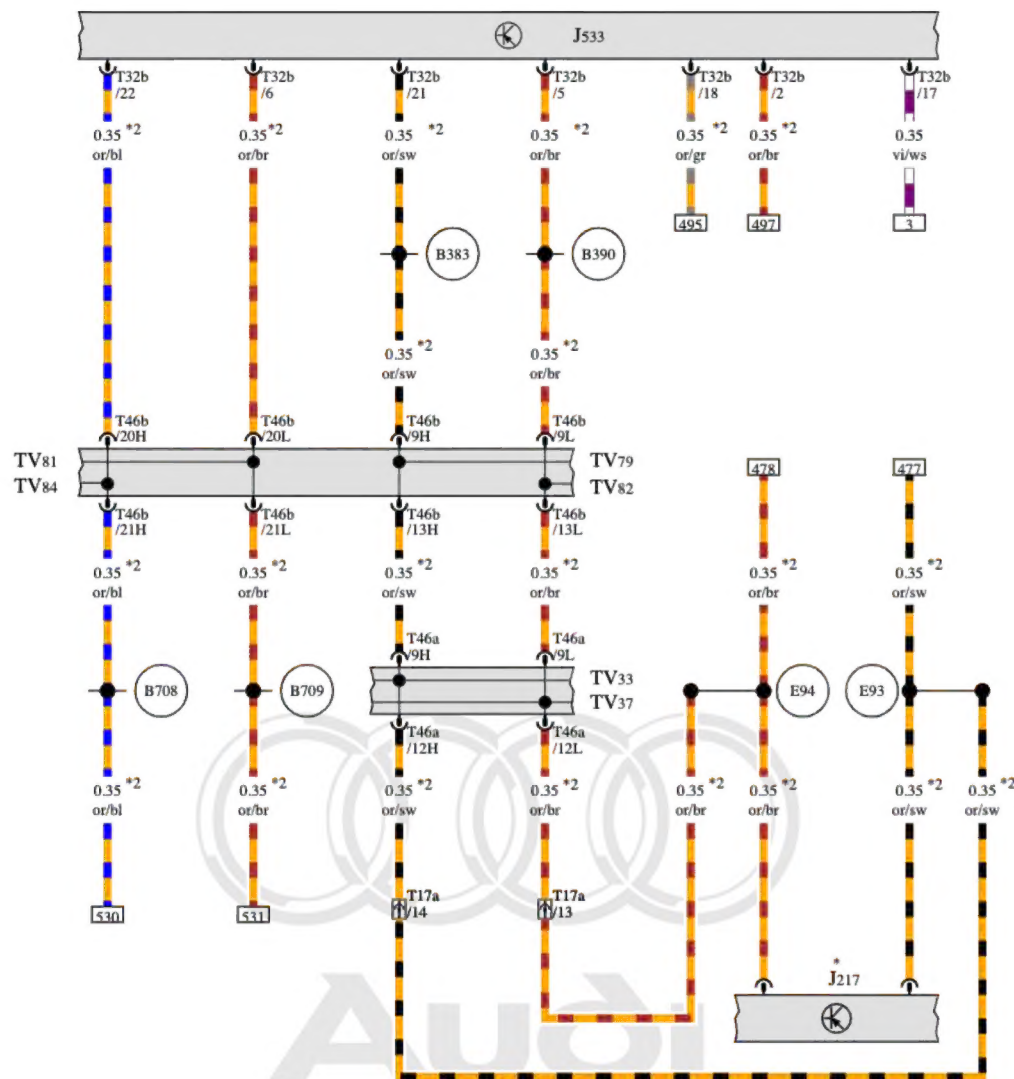

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

533 534 535 536 537 538 539 540 541 542 543 544 545 546

4672069400174